

SAMS

CC2

08901

COMPUTERFACTS™

TECHNICAL SERVICE DATA


TEXAS INSTRUMENTS TI-99/4A™

MODEL PHC004A
COMPUTER



FEATURES: COMPLETE SCHEMATICS • PRELIMINARY SERVICE CHECKS • TROUBLESHOOTING TIPS •
EASY-READ WAVEFORMS • REPLACEMENT PARTS LISTS • SEMICONDUCTOR CROSS-REFERENCE

TEXAS INSTRUMENTS
TI-99/4A MODEL PHC004A
CC 2

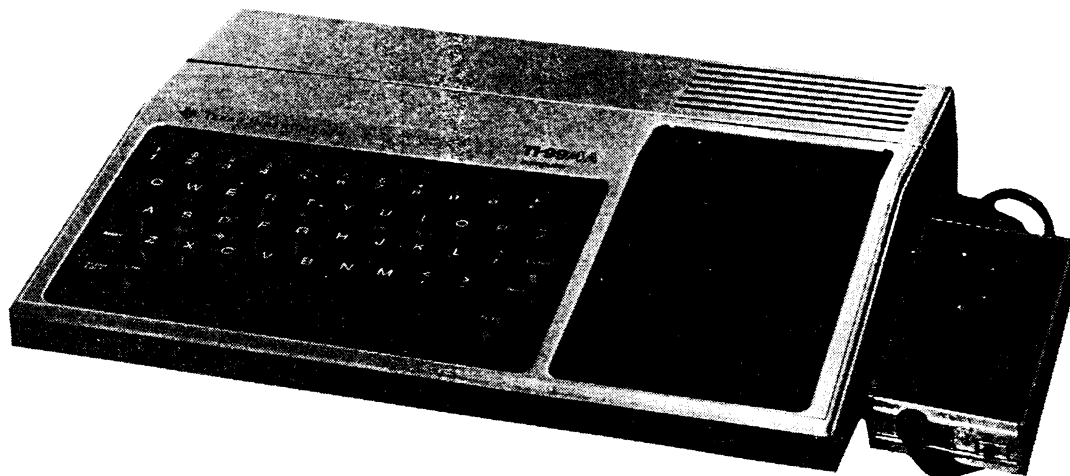

TEXAS INSTRUMENTS
TI-99/4A MODEL PHC004A
CC 2

TI-99/4A MODEL PHC004A

PRELIMINARY SERVICE CHECKS
ENCLOSED

SAFETY PRECAUTIONS
See page 13.

INDEX

	Page		Page
Adjustment	15	Photos (Continued)	
Block Diagram	25	Main Board	6 thru 10, 27 thru 31
Disassembly Instructions	12	Power Supply Board	5, 32
General Operating Instructions	12	Safety Precautions	13
GridTrace Location Guide		Schematics	
Power Supply Board	5, 32	IC Pinouts & Terminal Guides	11, 26
Line Definitions	13	Keyboard	2
Logic Chart	22, 23, 24	Main Board	2, 3, 35, 36, 37
Parts List	16 thru 21	Notes	11
Photos		Power Supply	34
Keyboard	4, 33	Troubleshooting	14, 15




SAMS™ Howard W. Sams & Co., Inc.
4300 West 62nd Street, P.O. Box 7092, Indianapolis, Indiana 46206 U.S.A.

The listing of any available replacement part herein does not constitute in any case a recommendation, warranty or guaranty by Howard W. Sams & Co., Inc., as to the quality and suitability of such replacement part. The numbers of these parts have been compiled from information furnished to Howard W. Sams & Co., Inc., by the manufacturers of the particular type of replacement part listed.

Reproduction or use, without express permission, of editorial or pictorial content, in any manner, is prohibited. No patent liability is assumed with respect to the use of the information contained herein.

© 1984 Howard W. Sams & Co., Inc.
4300 West 62nd Street, P.O. Box 7092, Indianapolis, Indiana 46206 U.S.A.
Printed in U.S. of America. 84CF14905 DATE 4-84


COMPUTERFACTS-OF-THE-MONTH SET NO. CF1 FOLDER CC 2

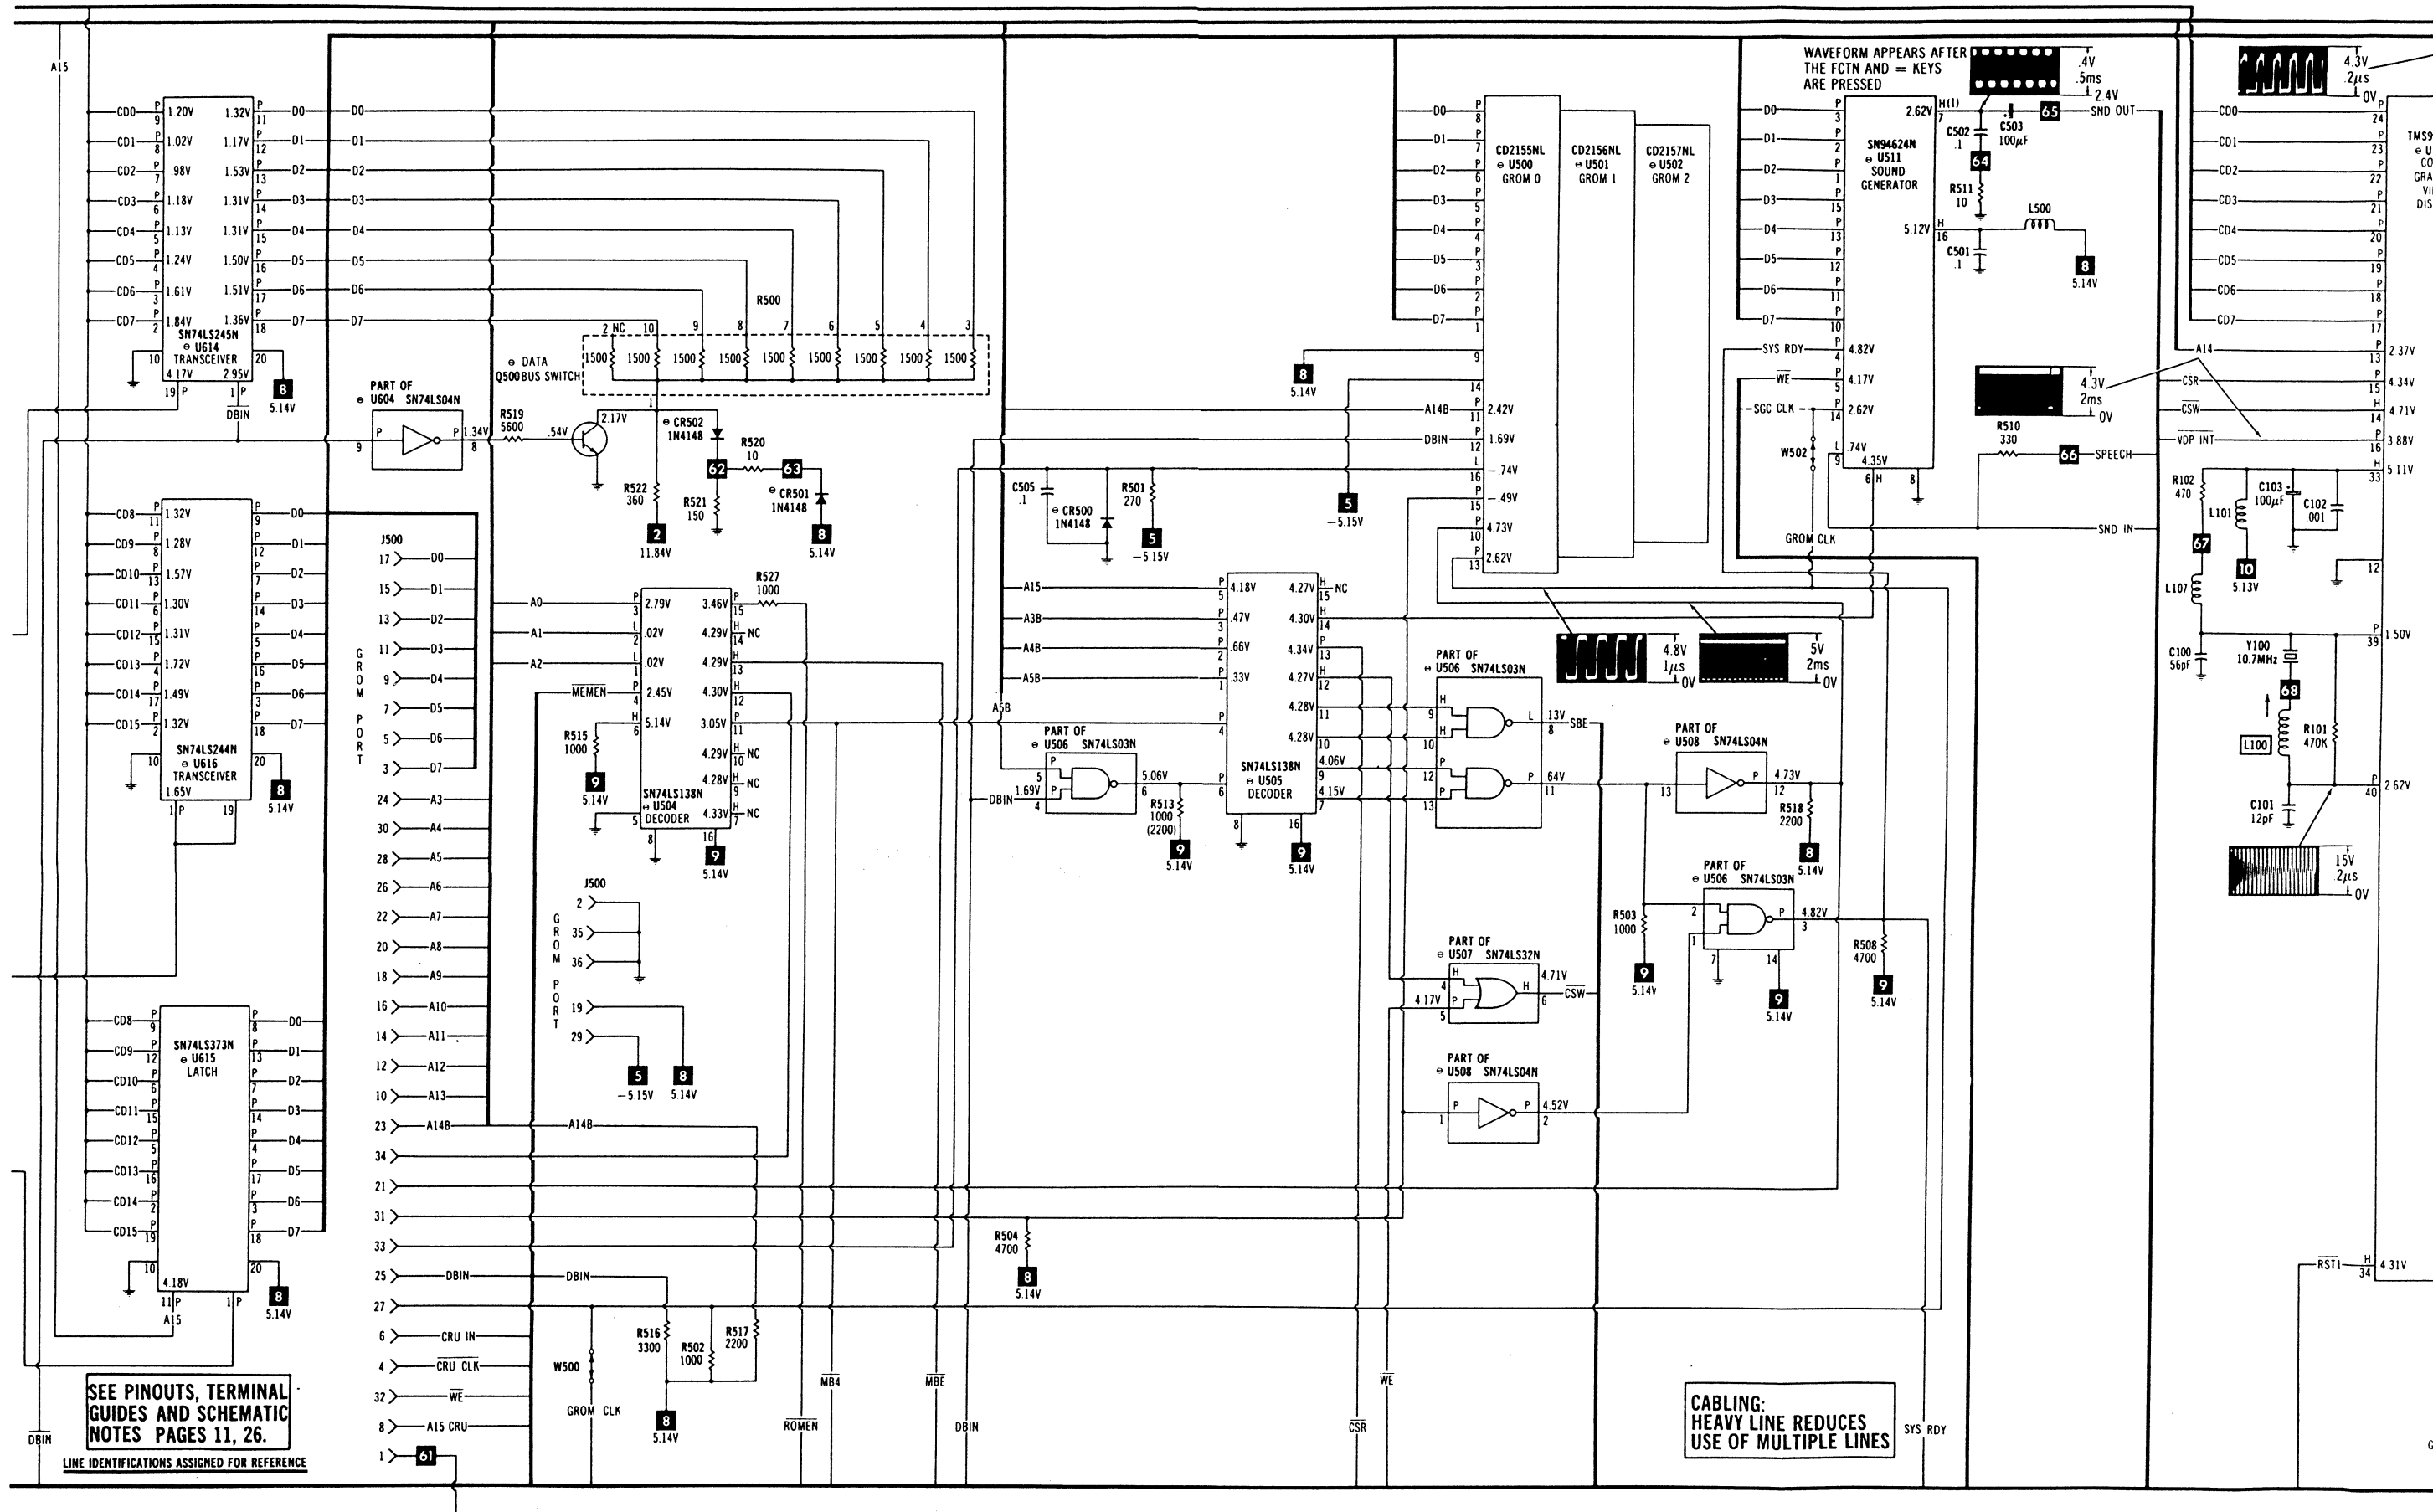

A PHOTOFACIT STANDARD NOTATION SCHEMATIC
WITH **CIRCUITACE**
© Howard W. Sams & Co., Inc. 1984

MAIN BOARD

SEE LINE DEFINITIONS ON PAGE 13

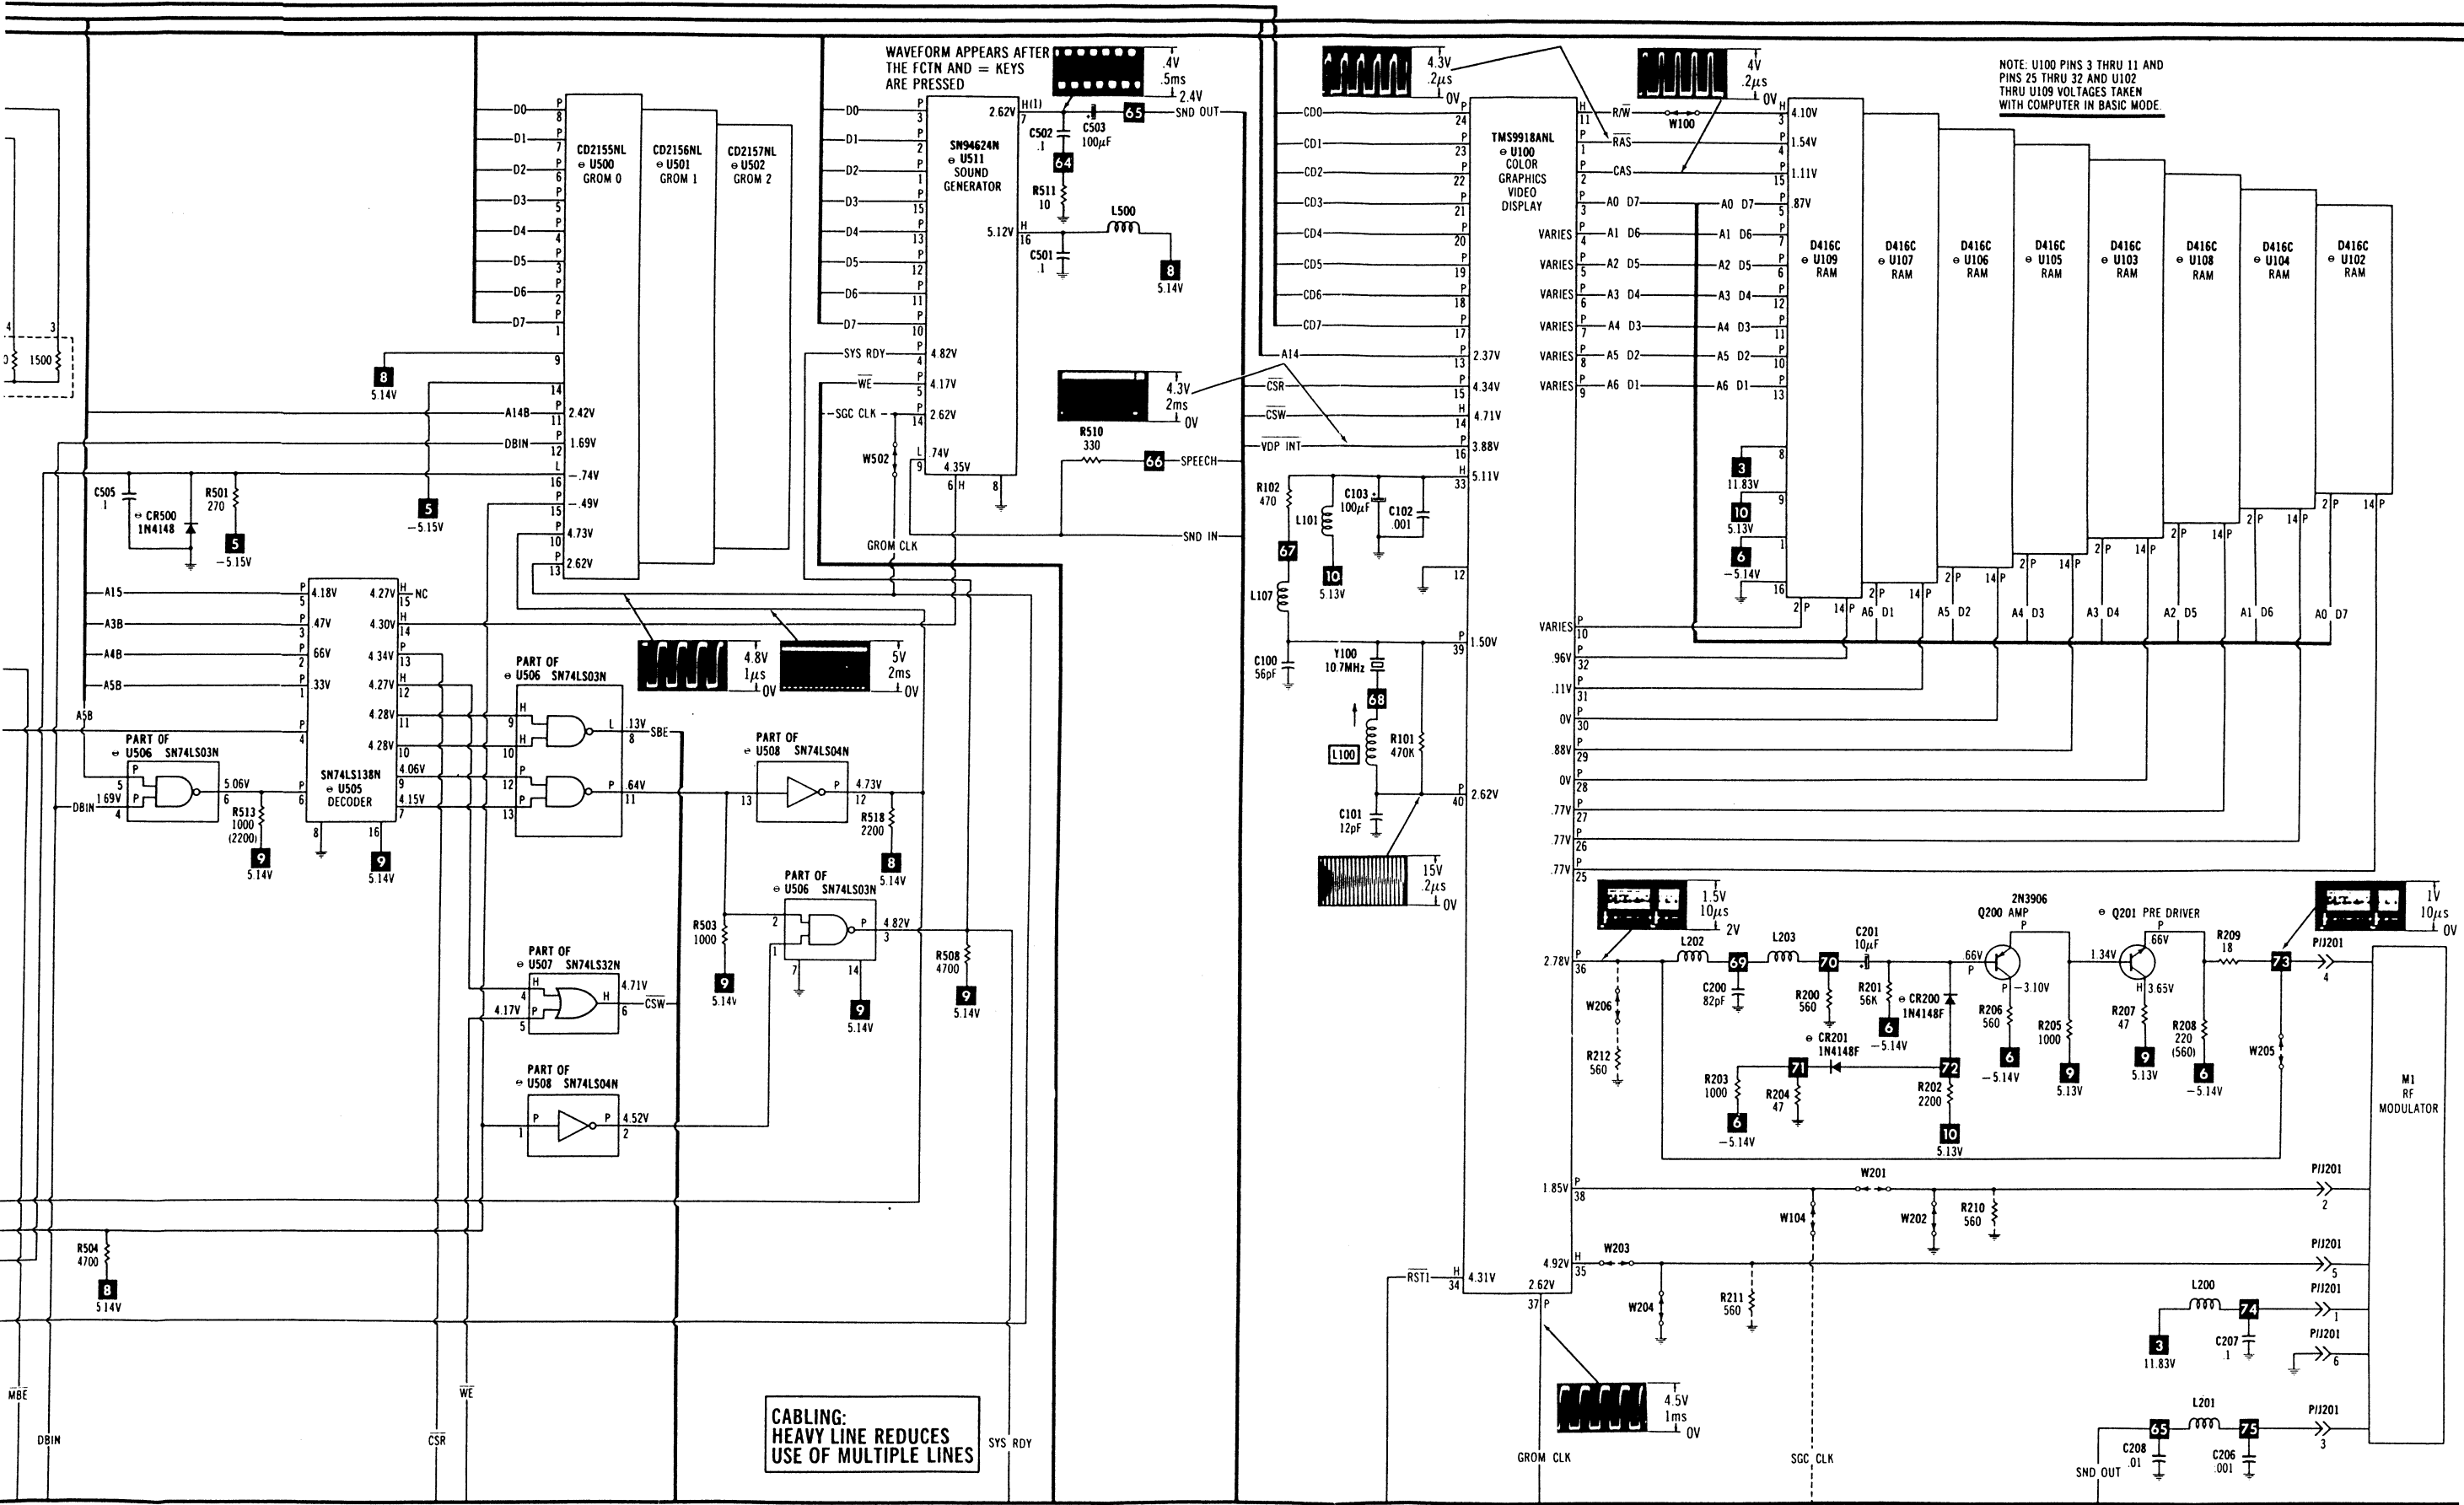

SEE LINE DEFINITIONS ON PAGE 13

TEXAS INSTRUMENTS
TI-99/4A MODEL PHC004A

MAIN BOARD

PRELIMINARY SERVICE CHECKS (Continued)

SERVICE CHECKS

SEE INTERCONNECTING DIAGRAM, PLACEMENT CHART, AND PHOTOS TO MATCH THE NUMBER IN THE CIRCLES WITH THOSE IN THE FOLLOWING DATA FOR SERVICE CHECKS TO BE PERFORMED.

- ① RF MODULATOR

(a) Power computer and verify the power indicator LED is lit. NOTE: If the power indicator LED is not lit, refer to the "Power Supply Check" section.

(b) Verify the channel select switch is on the same channel as the monitor, channel 3 or 4.

(c) Verify the TV/modulator switch is in modulator position.

(d) Check for bad connections and improper hook-up at the monitor and at the computer.

(e) If the computer still does not come up when powered, check the RF Modulator by substitution.

② POWER SUPPLY

(a) Power computer and measure the AC voltages, from the secondary of the Power Transformer (T1), on the power supply board. If there is no AC voltage, replace AC adaptor.

(b) Disconnect P2 from power supply board. Measure the DC voltages at P2.

(c) Measure the Regulator B+ voltage (21.5V) at L6. If the voltages are not present or are incorrect, replace or repair the power supply board.

③ MAIN BOARD

(a) Computer does not come up when powered. Check for -5.15V at pin 1, 5.14V at pins 2, 33, 59 and 64, and 11.84V at pin 27 of the Microprocessor IC U600. Verify the Timing Generator is functioning, by checking for pulses on pins 8, 9, 25, and 28 of the Microprocessor IC U600 using a logic probe.
- (b) No sound, substitute the Sound Generator IC U511.

(c) Video problems, substitute the Color Graphics Video Display IC U100.

(d) Monitor remains blank when the computer is turned On. Substitute a monitor known to be good. Substitute GROM IC U500 and Video IC U100.

(e) Monitor displays insert cartridge after pressing the number 1 key. Substitute GROM IC U501.

(f) If there is no line feed when pressing the ENTER key, substitute GROM IC U502.

(g) Remote control line will not turn on CS1. Remove power to computer and check the resistance from the emitter to collector of Q401. The resistance should read low during the time the recorder is suppose to be running and open when not running. If these readings are correct check the cassette recorder.

(h) Check the resistance reading from the emitter to collector of Q403 if CS2 will not turn On.

(i) Keyboard fails to function. Disconnect the keyboard connector P100. Power computer and check the voltage and logic readings at J100. If the readings are correct, check the keyboard.
- ④ KEYBOARD
- Substitute the keyboard or locate the bad key and clean the key switch with switch cleaner.

TEST EQUIPMENT AND TOOLS

TEST EQUIPMENT

Digital Volt/Ohm Meter
Logic Probe

TOOLS

Phillips Screwdriver
Small Screwdriver
Soldering Iron
Switch Cleaner

REPLACEMENT PARTS

AC Adaptor Model AC9500

IC	TYPE NO.
U100	TMS9918A
U500	CD2155NL
U501	CD2156NL
U502	CD2157NL
U511	SN94624N

PRELIMINARY SERVICE CHECKS (Continued)

DISASSEMBLY INSTRUCTIONS

CABINET BOTTOM REMOVAL

Remove the On-Off knob. Remove Phillips screws 1 thru 7 (See Figure 1) from the bottom and remove the cabinet bottom.

POWER SUPPLY BOARD REMOVAL

Remove Phillips screws 7 and 8 (See Figure 2) from the power supply board. Lift the board up, unplug the cable going to the main board and remove the power supply board.

MAIN BOARD REMOVAL

Remove Phillips screws 1, 2 and 3 (See Figure 2) holding the main board. Lift up the main board, unplug the keyboard and remove the main board.

To remove the shield, remove the two metal clamps (See Figure 2) and unplug the cartridge plug. Remove Phillips screws and nuts 4, 5 and 6 (See Figure 2) and remove the top and bottom shield.

KEYBOARD REMOVAL

Remove Phillips screws 9 thru 12 (See Figure 2) holding the keyboard. Unplug the keyboard from the main board and remove the keyboard.

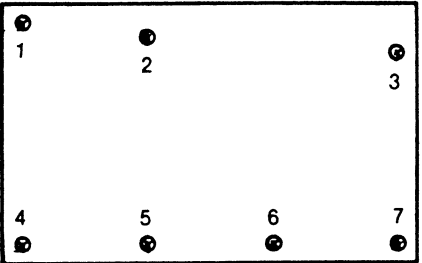


Figure 1
BOTTOM VIEW

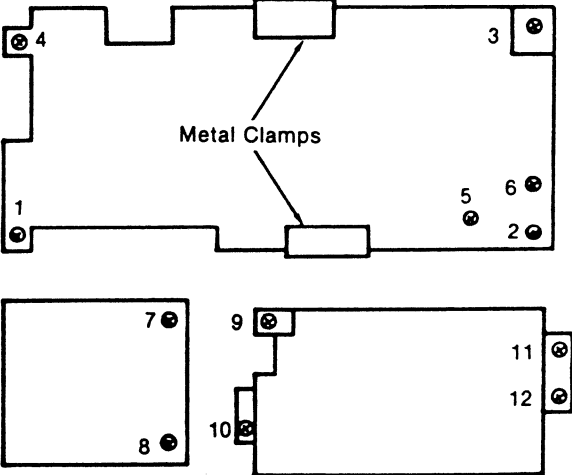


Figure 2
BOTTOM VIEW

PRELIMINARY SERVICE CHECKS

This data provides the user with a time-saving service tool which is designed for quick isolation and repair of computer malfunctions.

Check all interconnecting cables for good connection and correct hook-up before making service checks.

Disconnect all peripherals except the monitor from the computer to eliminate possible external malfunctions.

Replacement or repair of the power supply board, RF modulator, keyboard, or connectors may be necessary after the malfunction has been isolated.

GENERAL OPERATING INSTRUCTIONS

POWER UP

When the computer is turned On, the main title screen will be displayed on the monitor. Press any key and a menu will be displayed.

The menu choices will be determined by the Solid State Cartridge used. Turn the computer Off when inserting or removing a Solid State Cartridge. Refer to the menu and press the key for the desired function.

For instructions to load and save programs on cassette tape, refer to "Cassette Operation". Run a basic program by typing RUN and press the ENTER key. Stop a program by holding down the FCTN key and press the number 4 key. The computer will return to the basic mode and the program will be unaffected. Reset the computer by holding down the FCTN key and press the = key. The computer will return to the main title screen and any program in memory will be lost.

CASSETTE OPERATION

Connect the cassette cable to the cassette plug on the rear of the computer. Connect the plug with the red wire to the Mic input on the recorder, the plug with the white wire to the Earphone output on the recorder and the plug with the black wire to the Remote input on the recorder.

NOTE: The remote control may not work on some recorders.

Set the Tone control on the recorder to Maximum and the volume control to mid-range. Verify the ALPHA LOCK key, on the computer, is in the down position and put the computer in BASIC mode.

Save a program by typing SAVE CS1, press the ENTER key and follow the instructions that appear on the monitor screen.

Load a program by typing OLD CS1, press the ENTER key and follow the instructions that appear on the monitor screen. If a program will not load, set the Volume control to a different level and try loading the program again.

When using two recorders, the recorder connected to the three plug section of the cable will be CS1 and the recorder connected to the two plug section will be CS2. CS2 can be used for saving programs or data only. Save a program on CS2 by typing SAVE CS2, press the ENTER key and follow the instructions that appear on the monitor.

SAMS Howard W. Sams & Co., Inc.
4300 West 62nd Street, P.O. Box 7092, Indianapolis, Indiana 46206 U.S.A.


The listing of any available replacement part herein does not constitute in any case a recommendation, warranty or guaranty by Howard W. Sams & Co., Inc., as to the quality and suitability of such replacement part. The numbers of these parts have been compiled from information furnished to Howard W. Sams & Co., Inc., by the manufacturers of the particular type of replacement part listed.

Reproduction or use, without express permission, of editorial or pictorial content, in any manner, is prohibited. No patent liability is assumed with respect to the use of the information contained herein.
© 1984 Howard W. Sams & Co., Inc.
4300 West 62nd Street, P.O. Box 7092, Indianapolis, Indiana 46206 U.S.A.
Printed in U.S. of America. 84CF14905 DATE 4-84

COMPUTERFACTS-OF-THE-MONTH SET NO. CF1 FOLDER CC 2

CC 2 TEXAS INSTRUMENTS
TI-99/4A MODEL PHC004A

CC 2 TEXAS INSTRUMENTS
TI-99/4A MODEL PHC004A

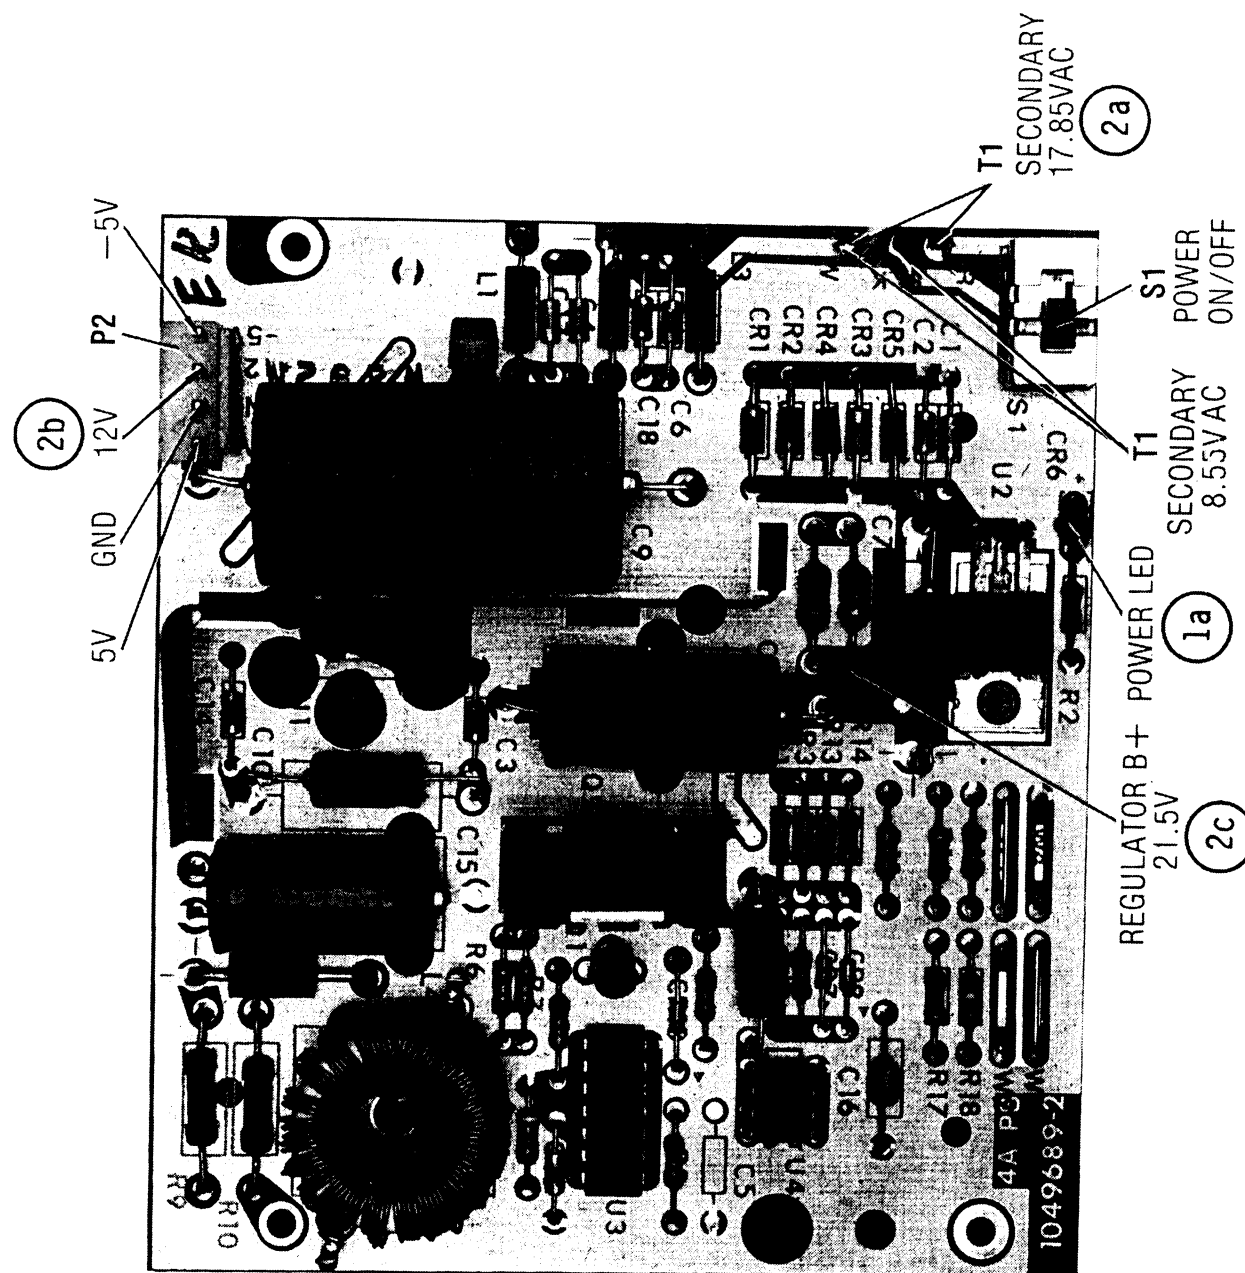


POWER SUPPLY BOARD




PRELIMINARY SERVICE CHECKS (Continued)

PRELIMINARY SERVICE CHECKS (Continued)

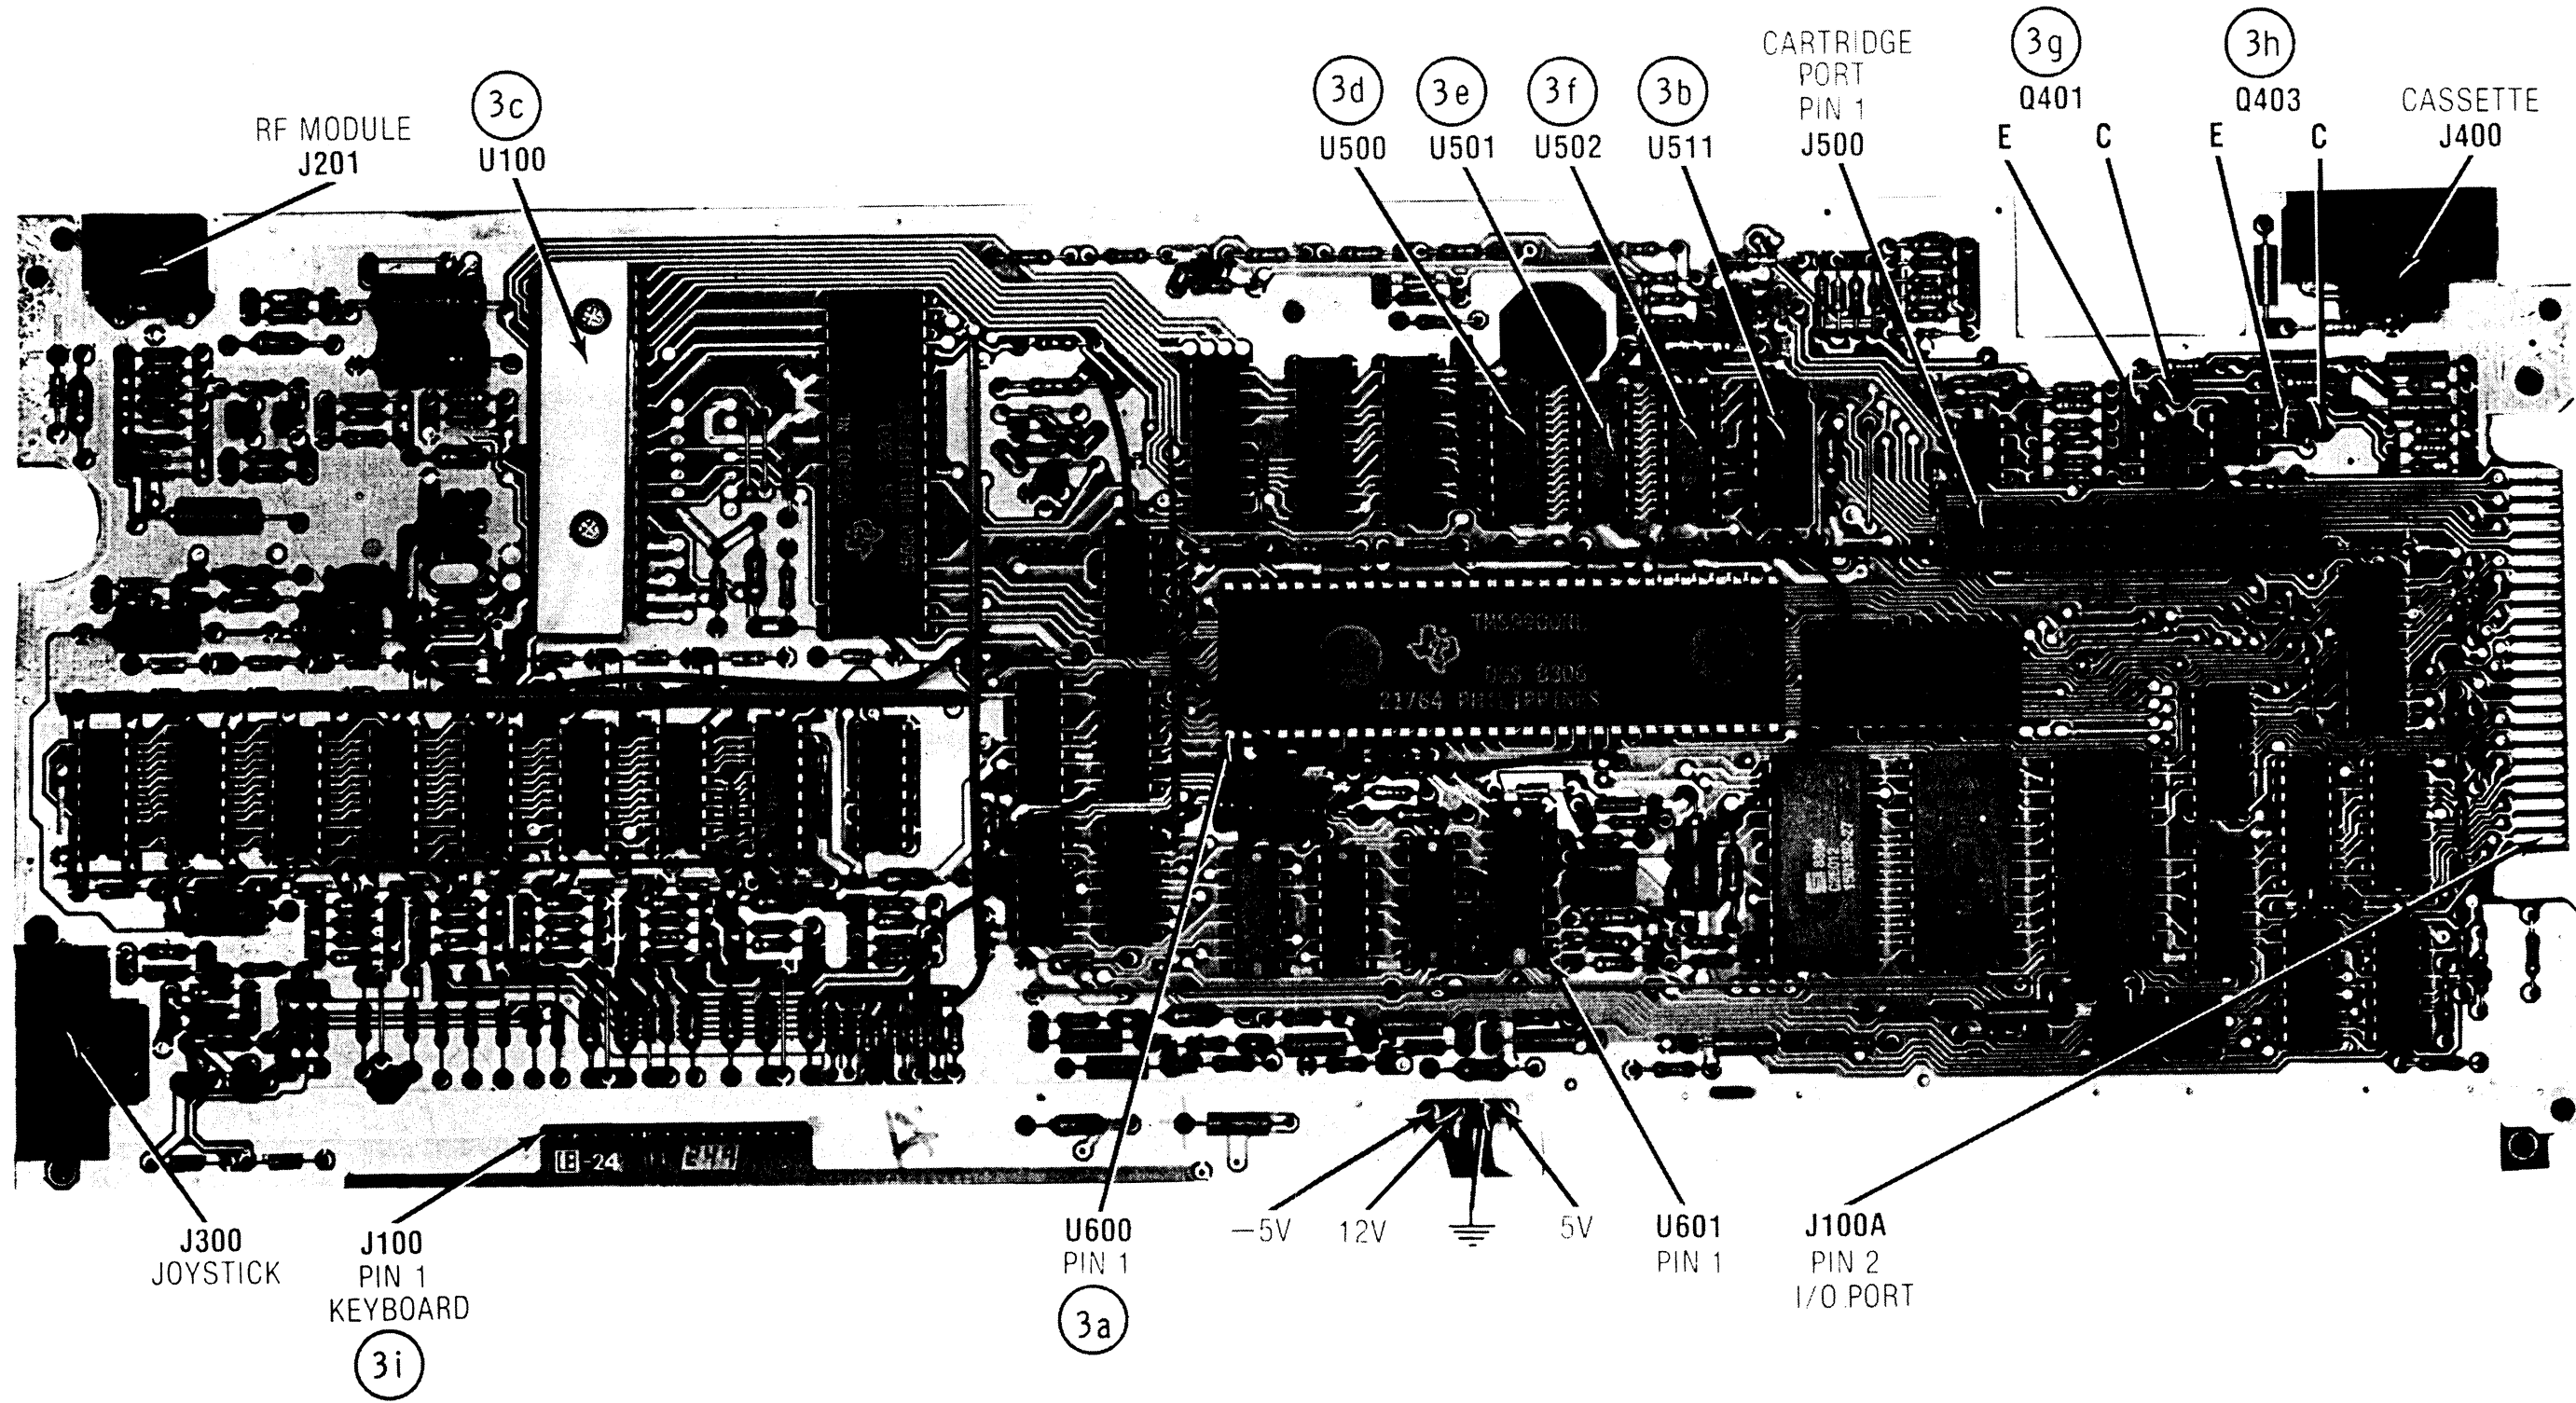


TEXAS INSTRUMENTS
TI-99/4A MODEL PHC004A

PRELIMINARY SERVICE CHECKS (Continued)

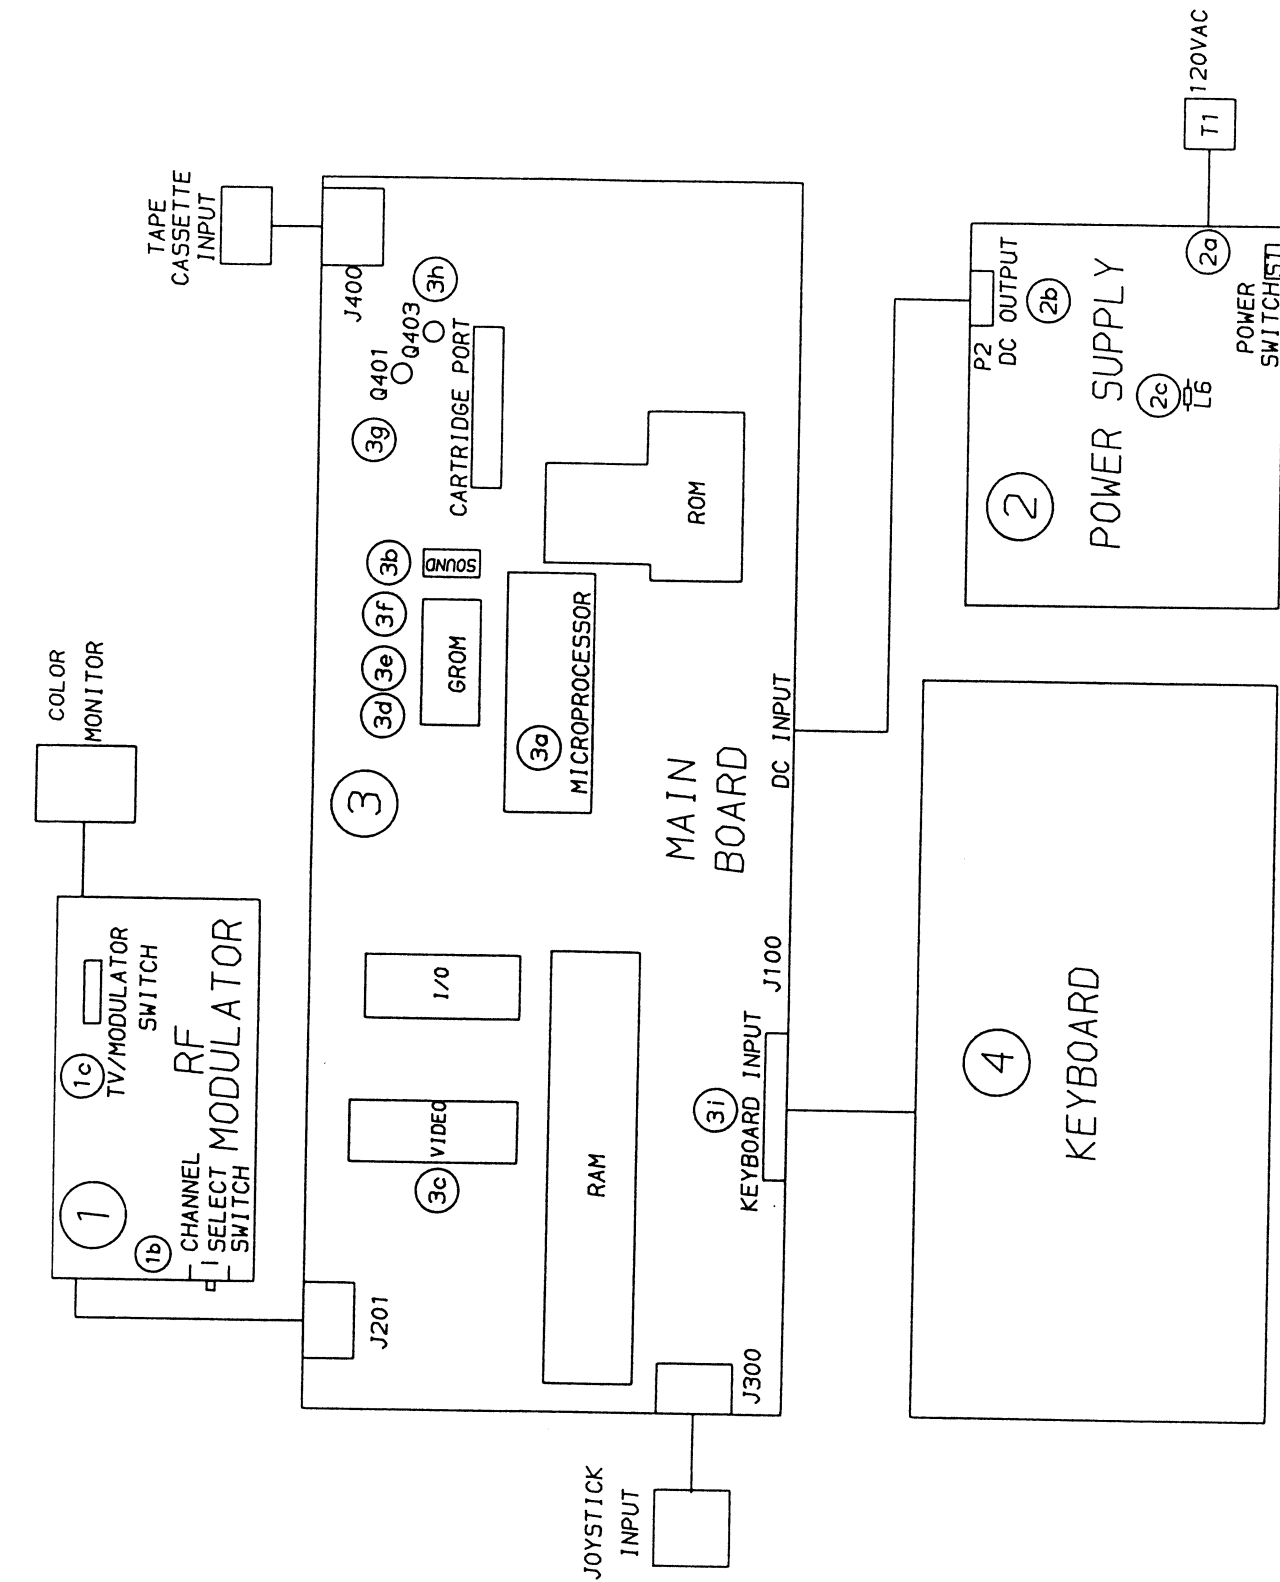


PLACEMENT CHART
VI

PRELIMINARY SERVICE CHECKS (Continued)

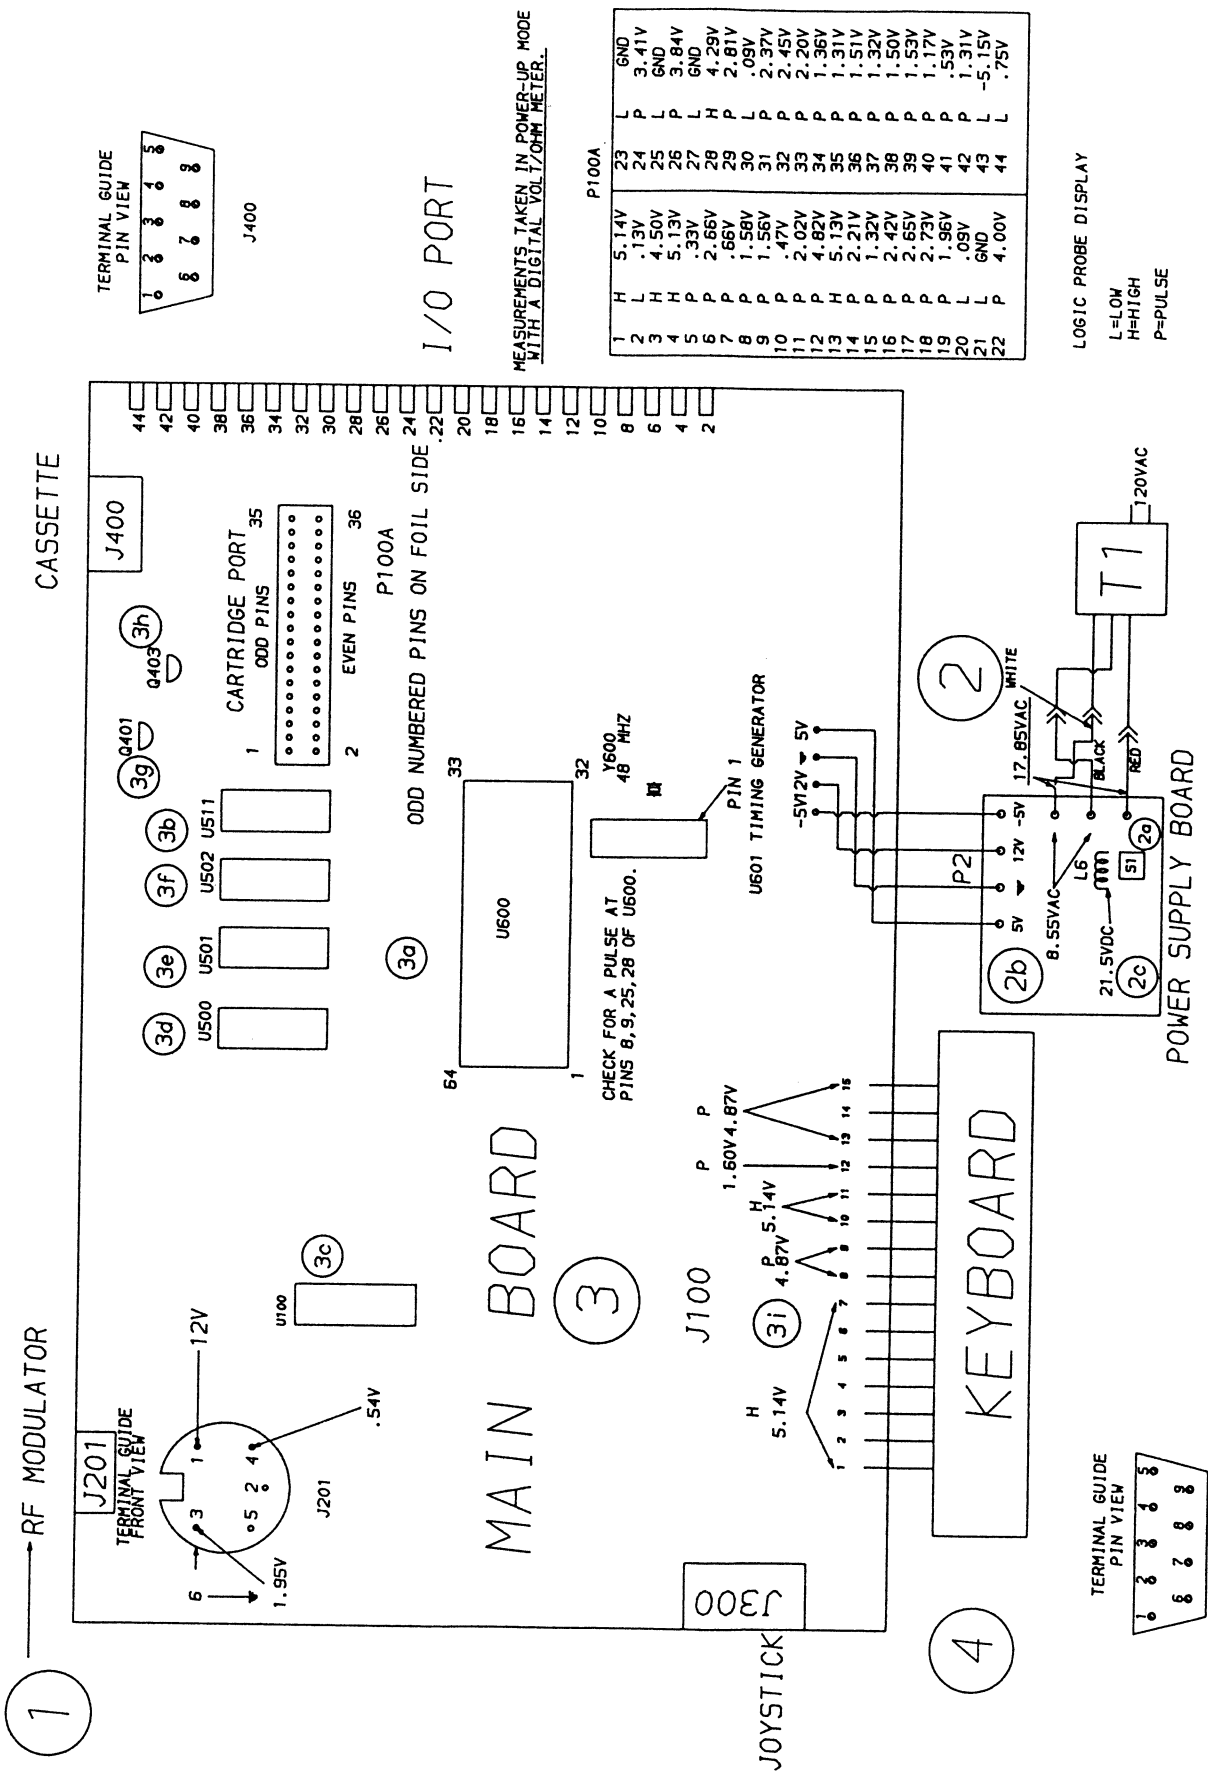


INTERCONNECTING DIAGRAM
COMPUTERFACTS-OF-THE-MONTH SET NO. CF1 FOLDER CC 2 III

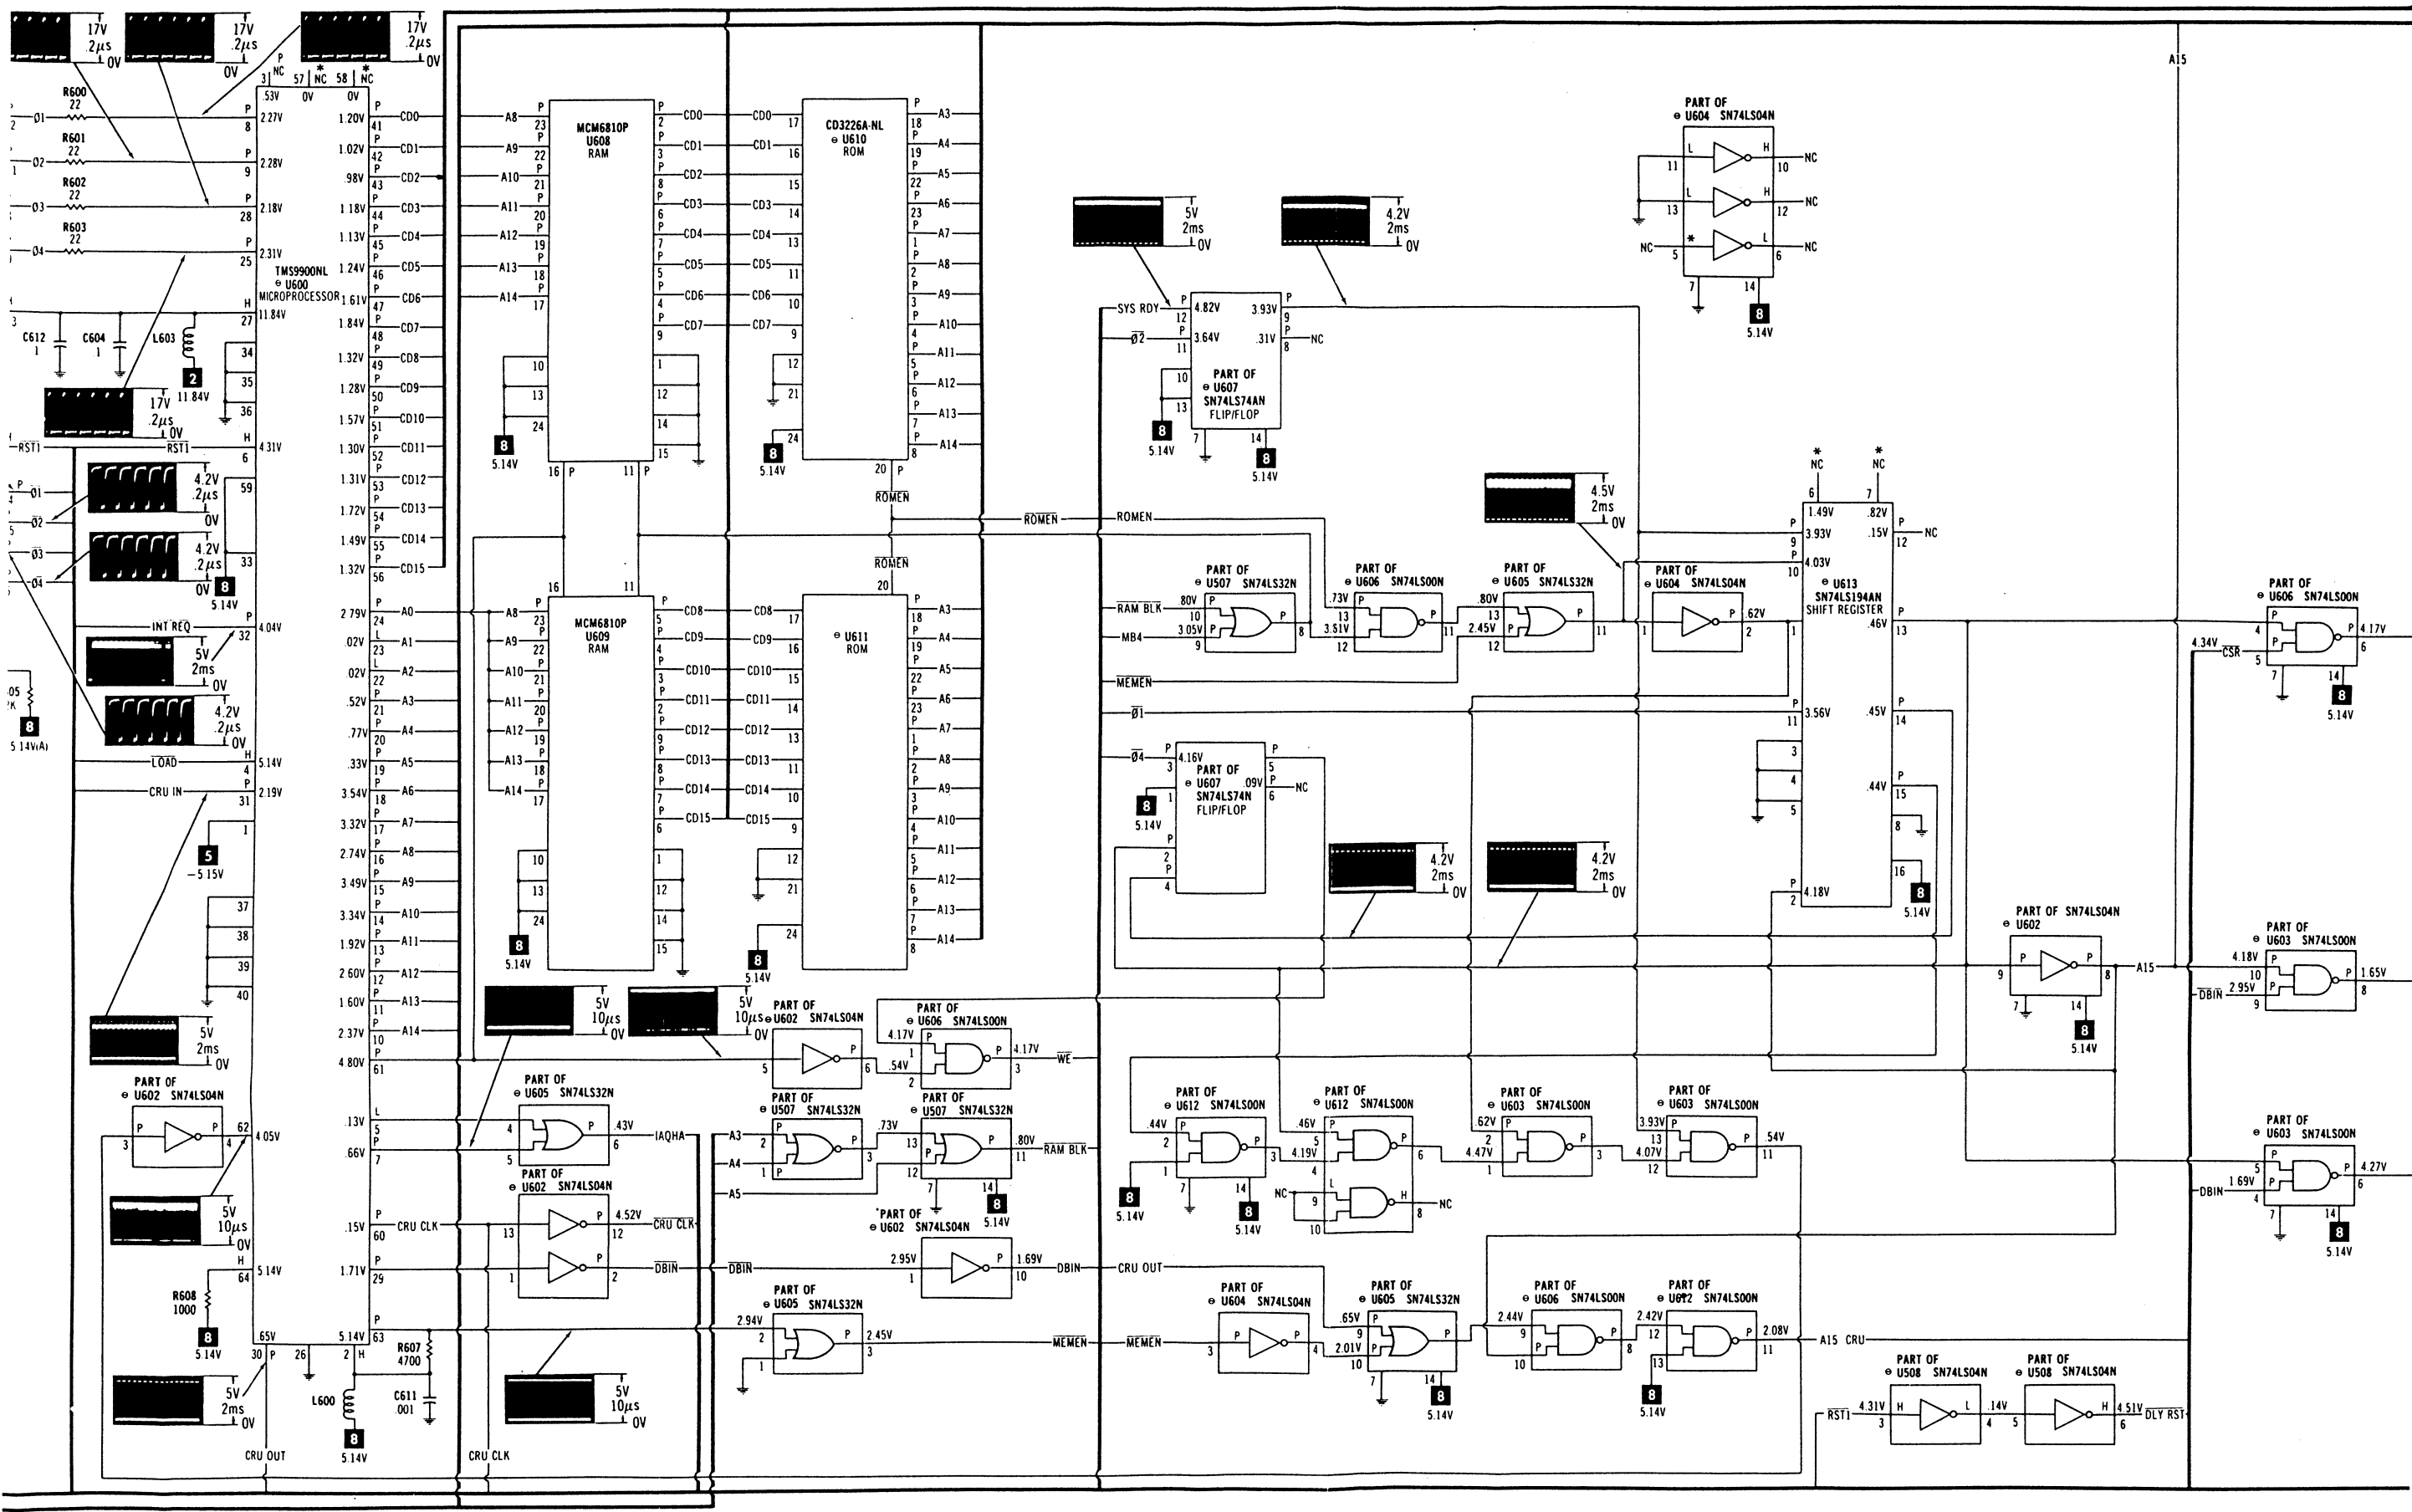


A PHOTOFACT STANDARD NOTATION SCHEMATIC
WITH **CIRCUITRACE™**
© Howard W. Sams & Co., Inc. 1984

POWER SUPPLY


SEE LINE DEFINITIONS ON PAGE 13

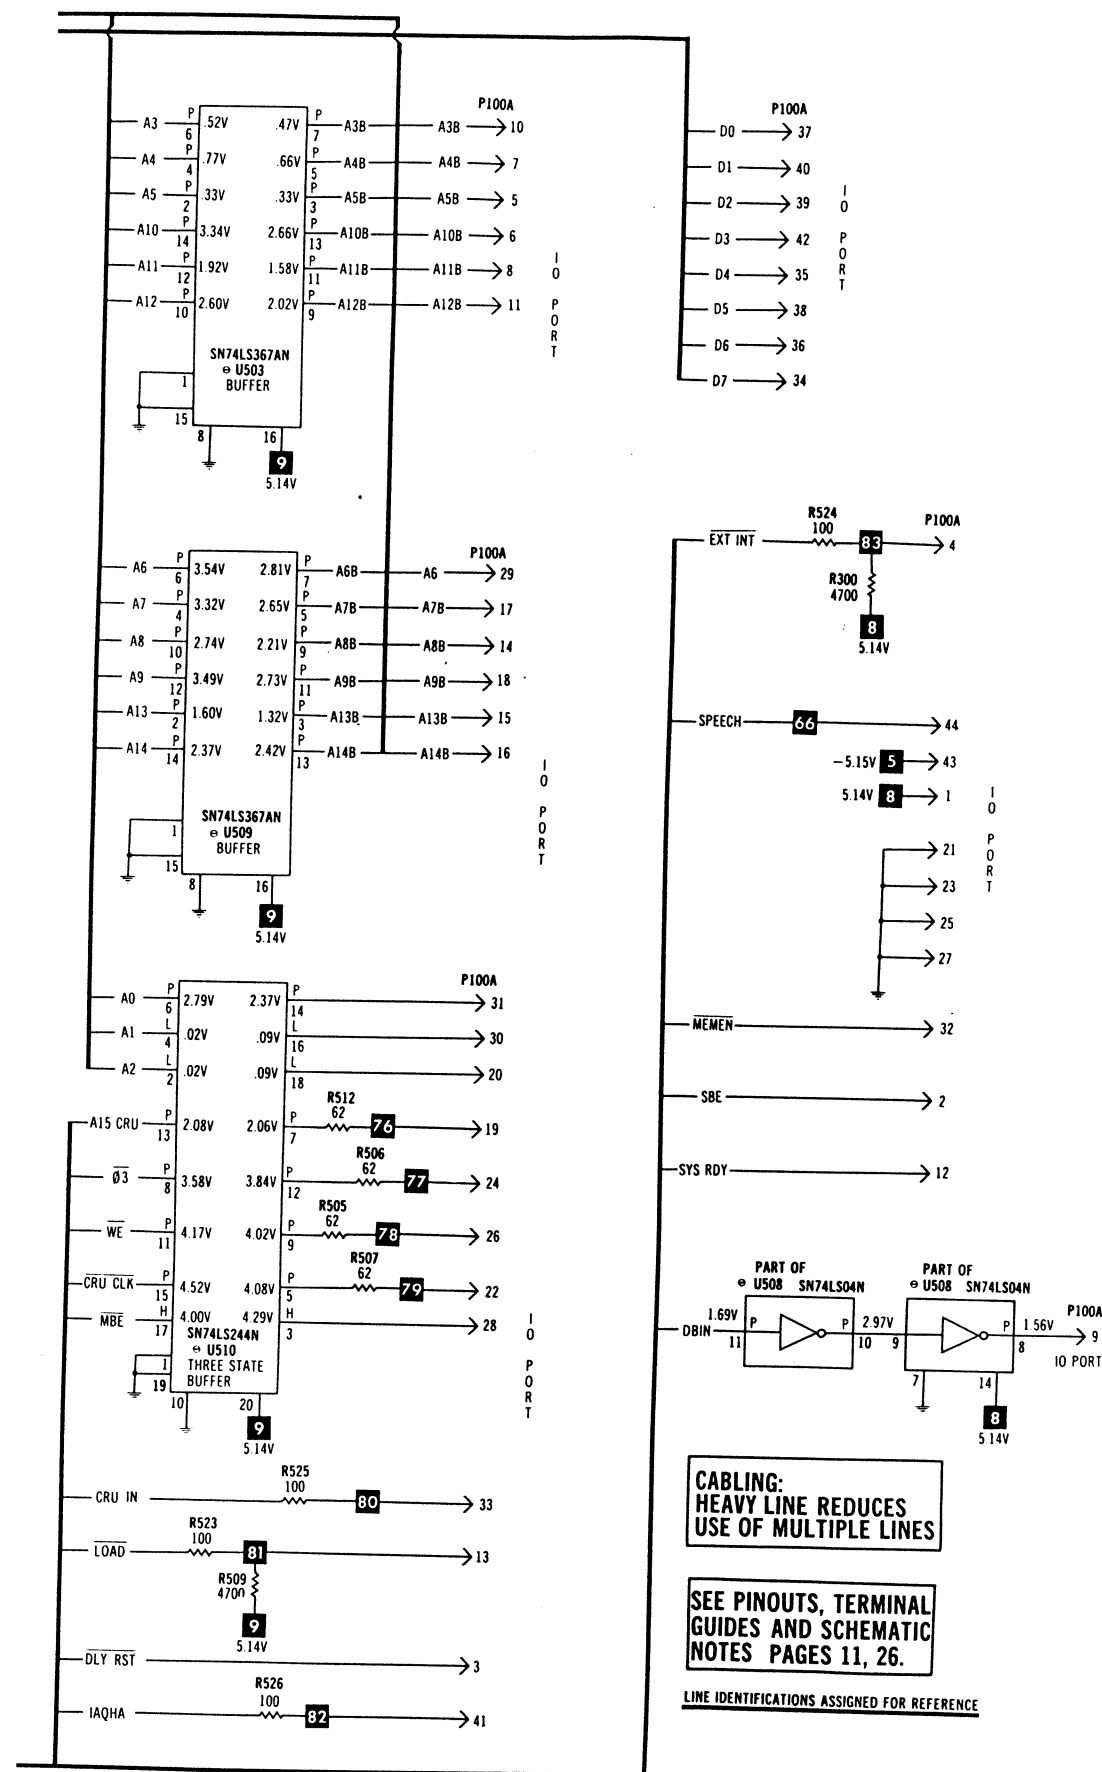

MAIN BOARD

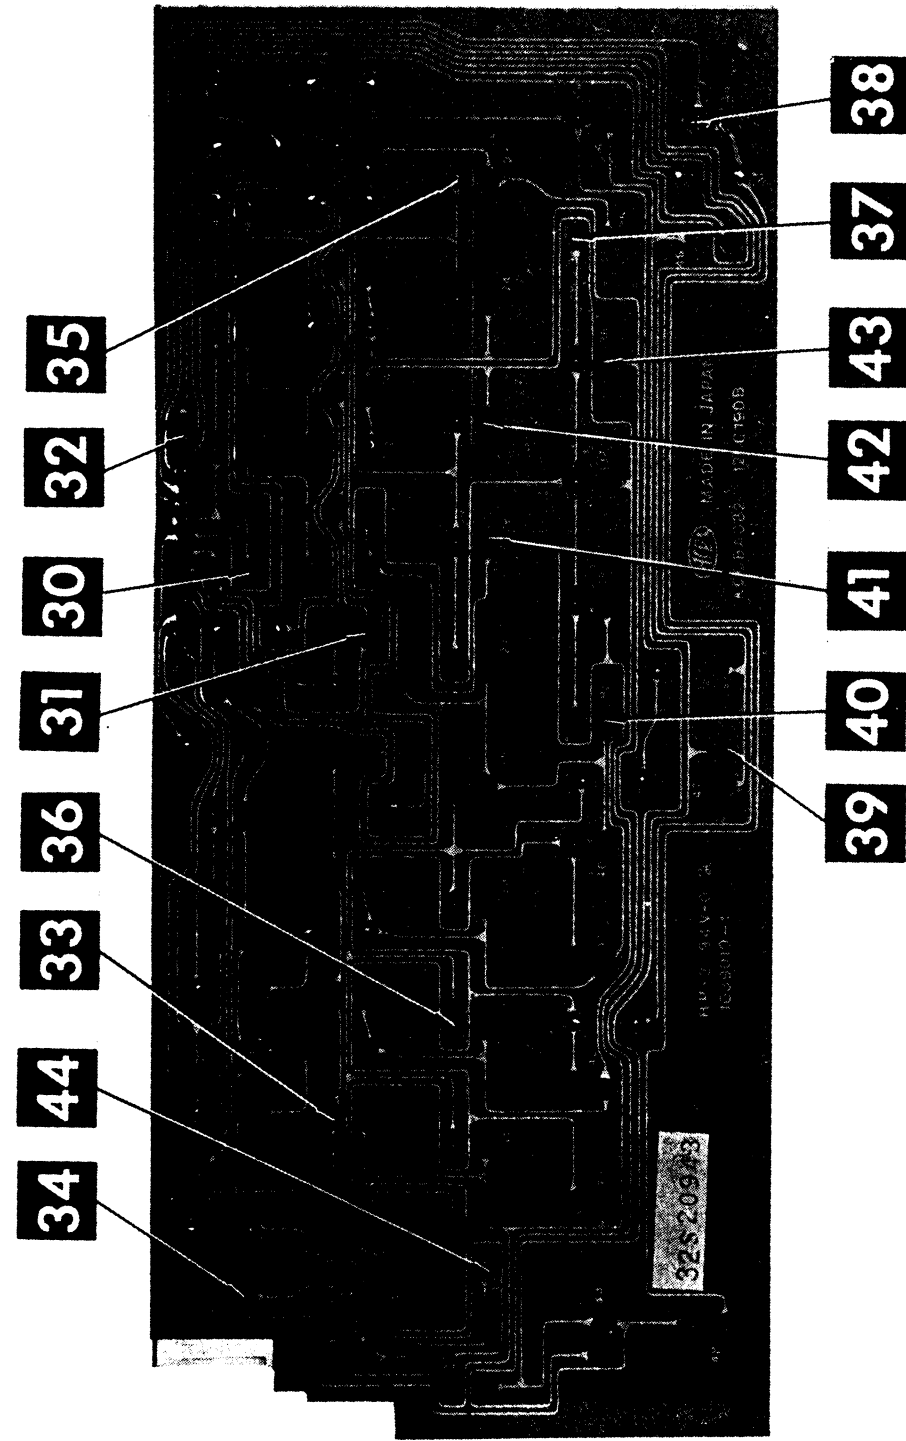

NOTE THERE IS NO GROUND ON KEYBOARD

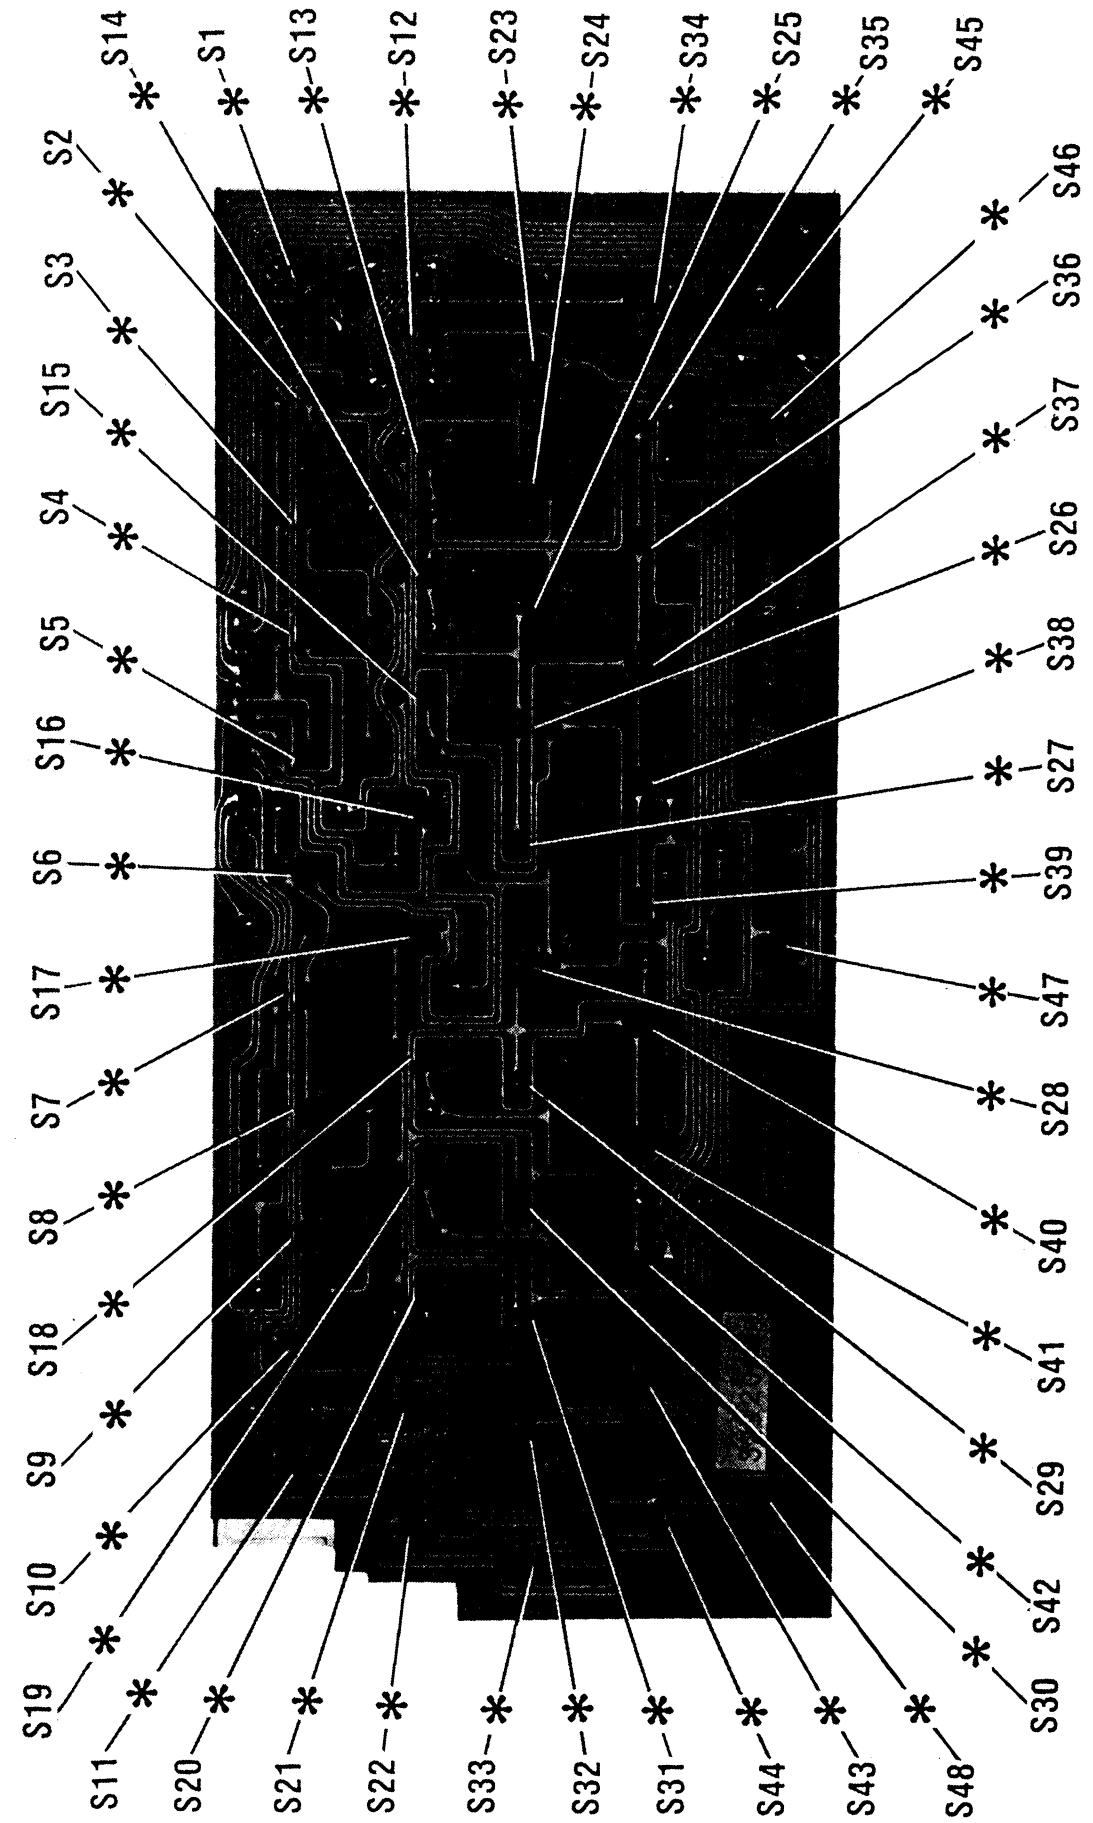



* LOCATED ON OTHER SIDE OF BOARD


POWER SUPPLY
BOARD

GridTrace


LOCATION GUIDE

C1	J-10
C2	J-10
C3	D-7
C4	F-11
C6	C-11
C7	J-8
C8	G-7
C9	D-9
C10	C-6
C11	E-2
C12	H-4
C13	E-1
C14	B-7
C15	C-5
C16	I-3
C17	E-11
C18	F-11
CR1	H-10
CR2	H-10
CR3	I-10
CR4	H-10
CR5	I-10
CR7	H-4
CR8	I-4
CR9	B-4
CR10	G-3
L1	E-11
L2	F-11
L3	G-11
L4	D-2
L5	H-8
L6	I-8
P/J2	A-10
Q1	F-4
Q2	F-5
R1	H-5
R2	K-8
R3	H-5
R4	G-3
R5	E-3
R6	E-4
R7	E-3
R8	G-2
R9	A-2
R10	B-2
R11	H-4
R12	H-4
R13	H-5
R14	I-5
R15	I-5
R16	J-5
R17	J-3
R18	J-3
R19	J-5
S1A	K-11
U1	C-8
U2	J-8
U3	F-2
U4	H-2
W1	K-5
W2	K-5
W3	K-3
W4	K-5

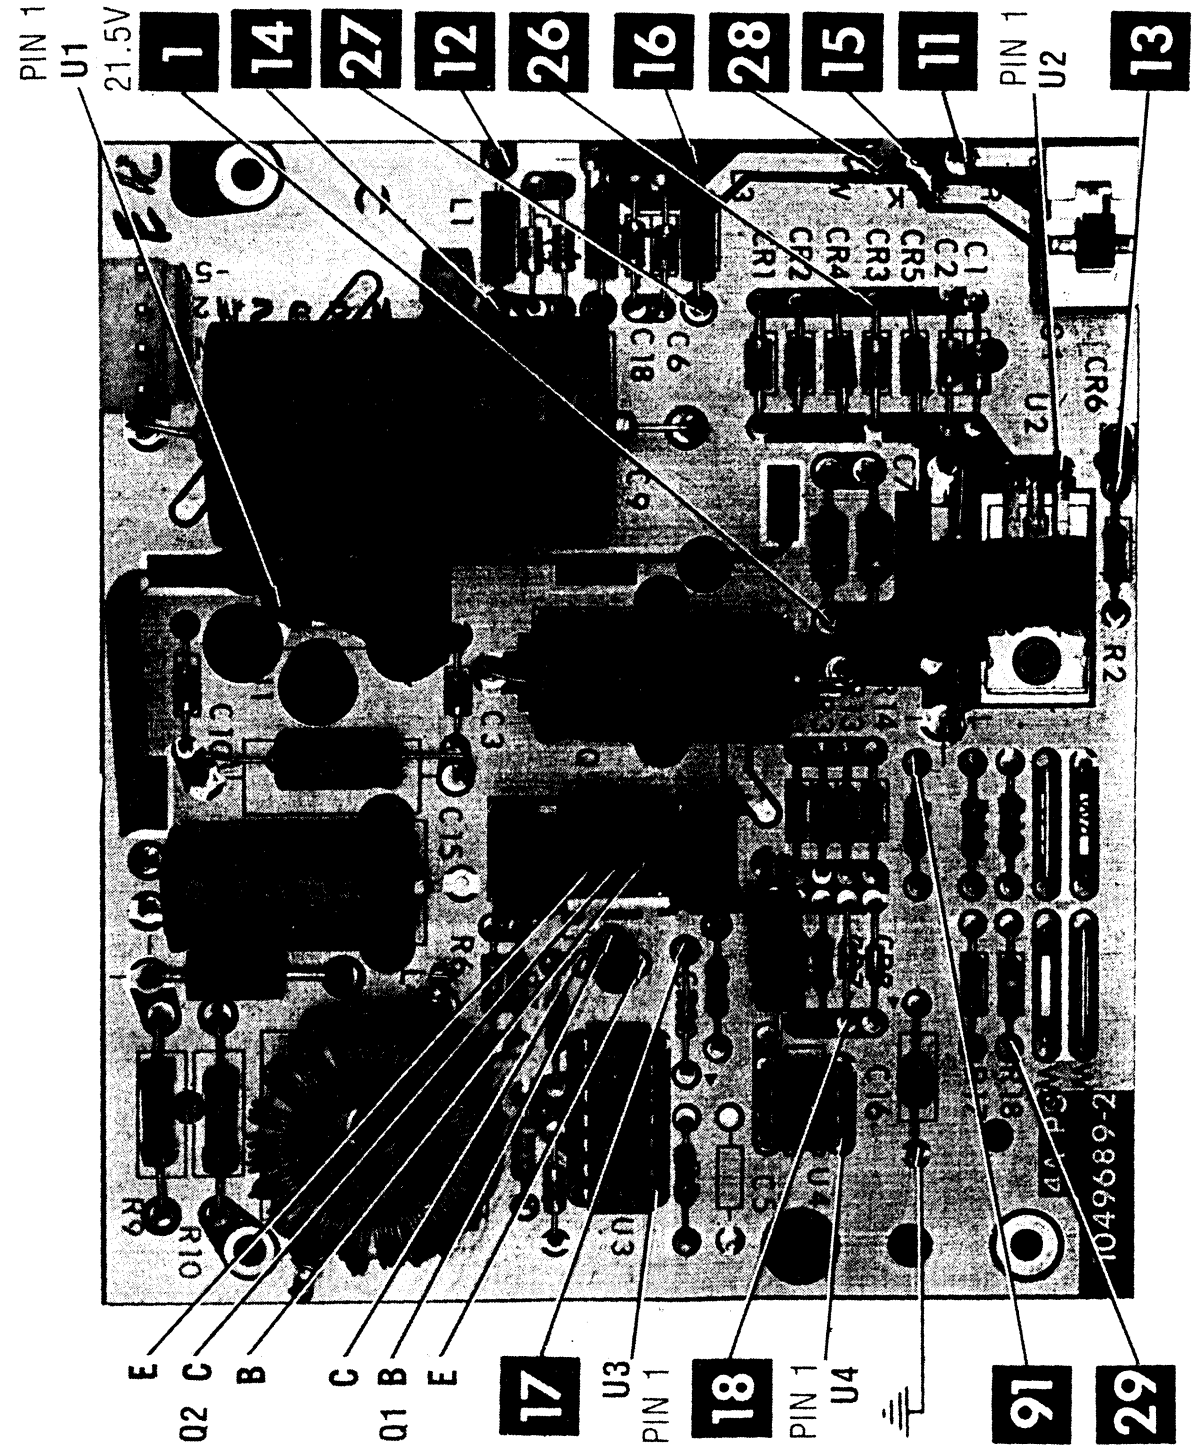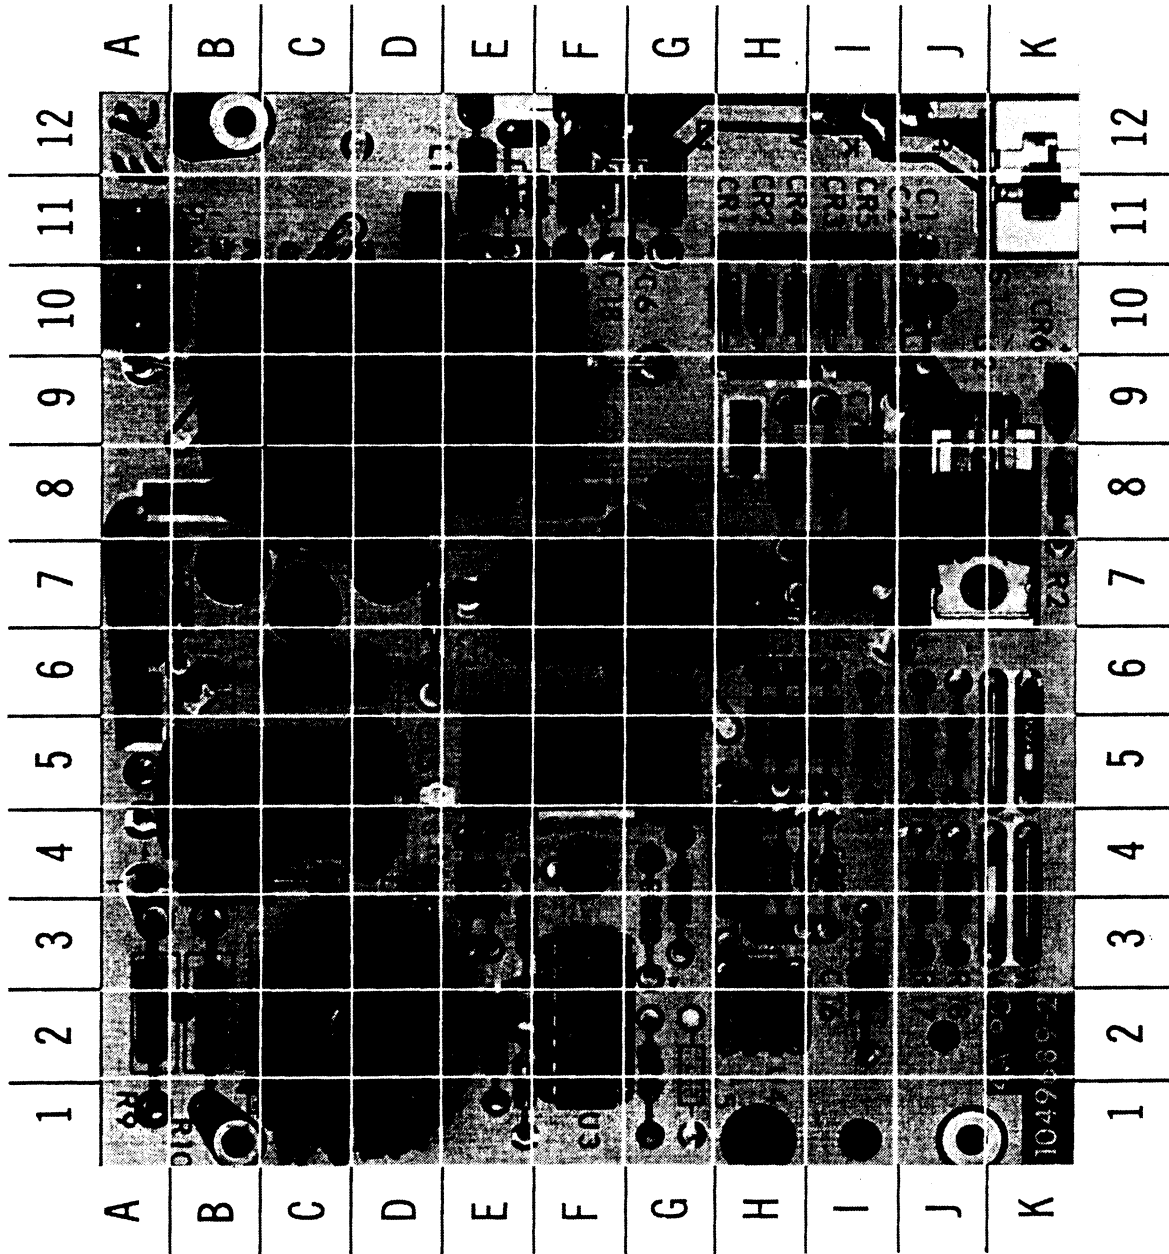

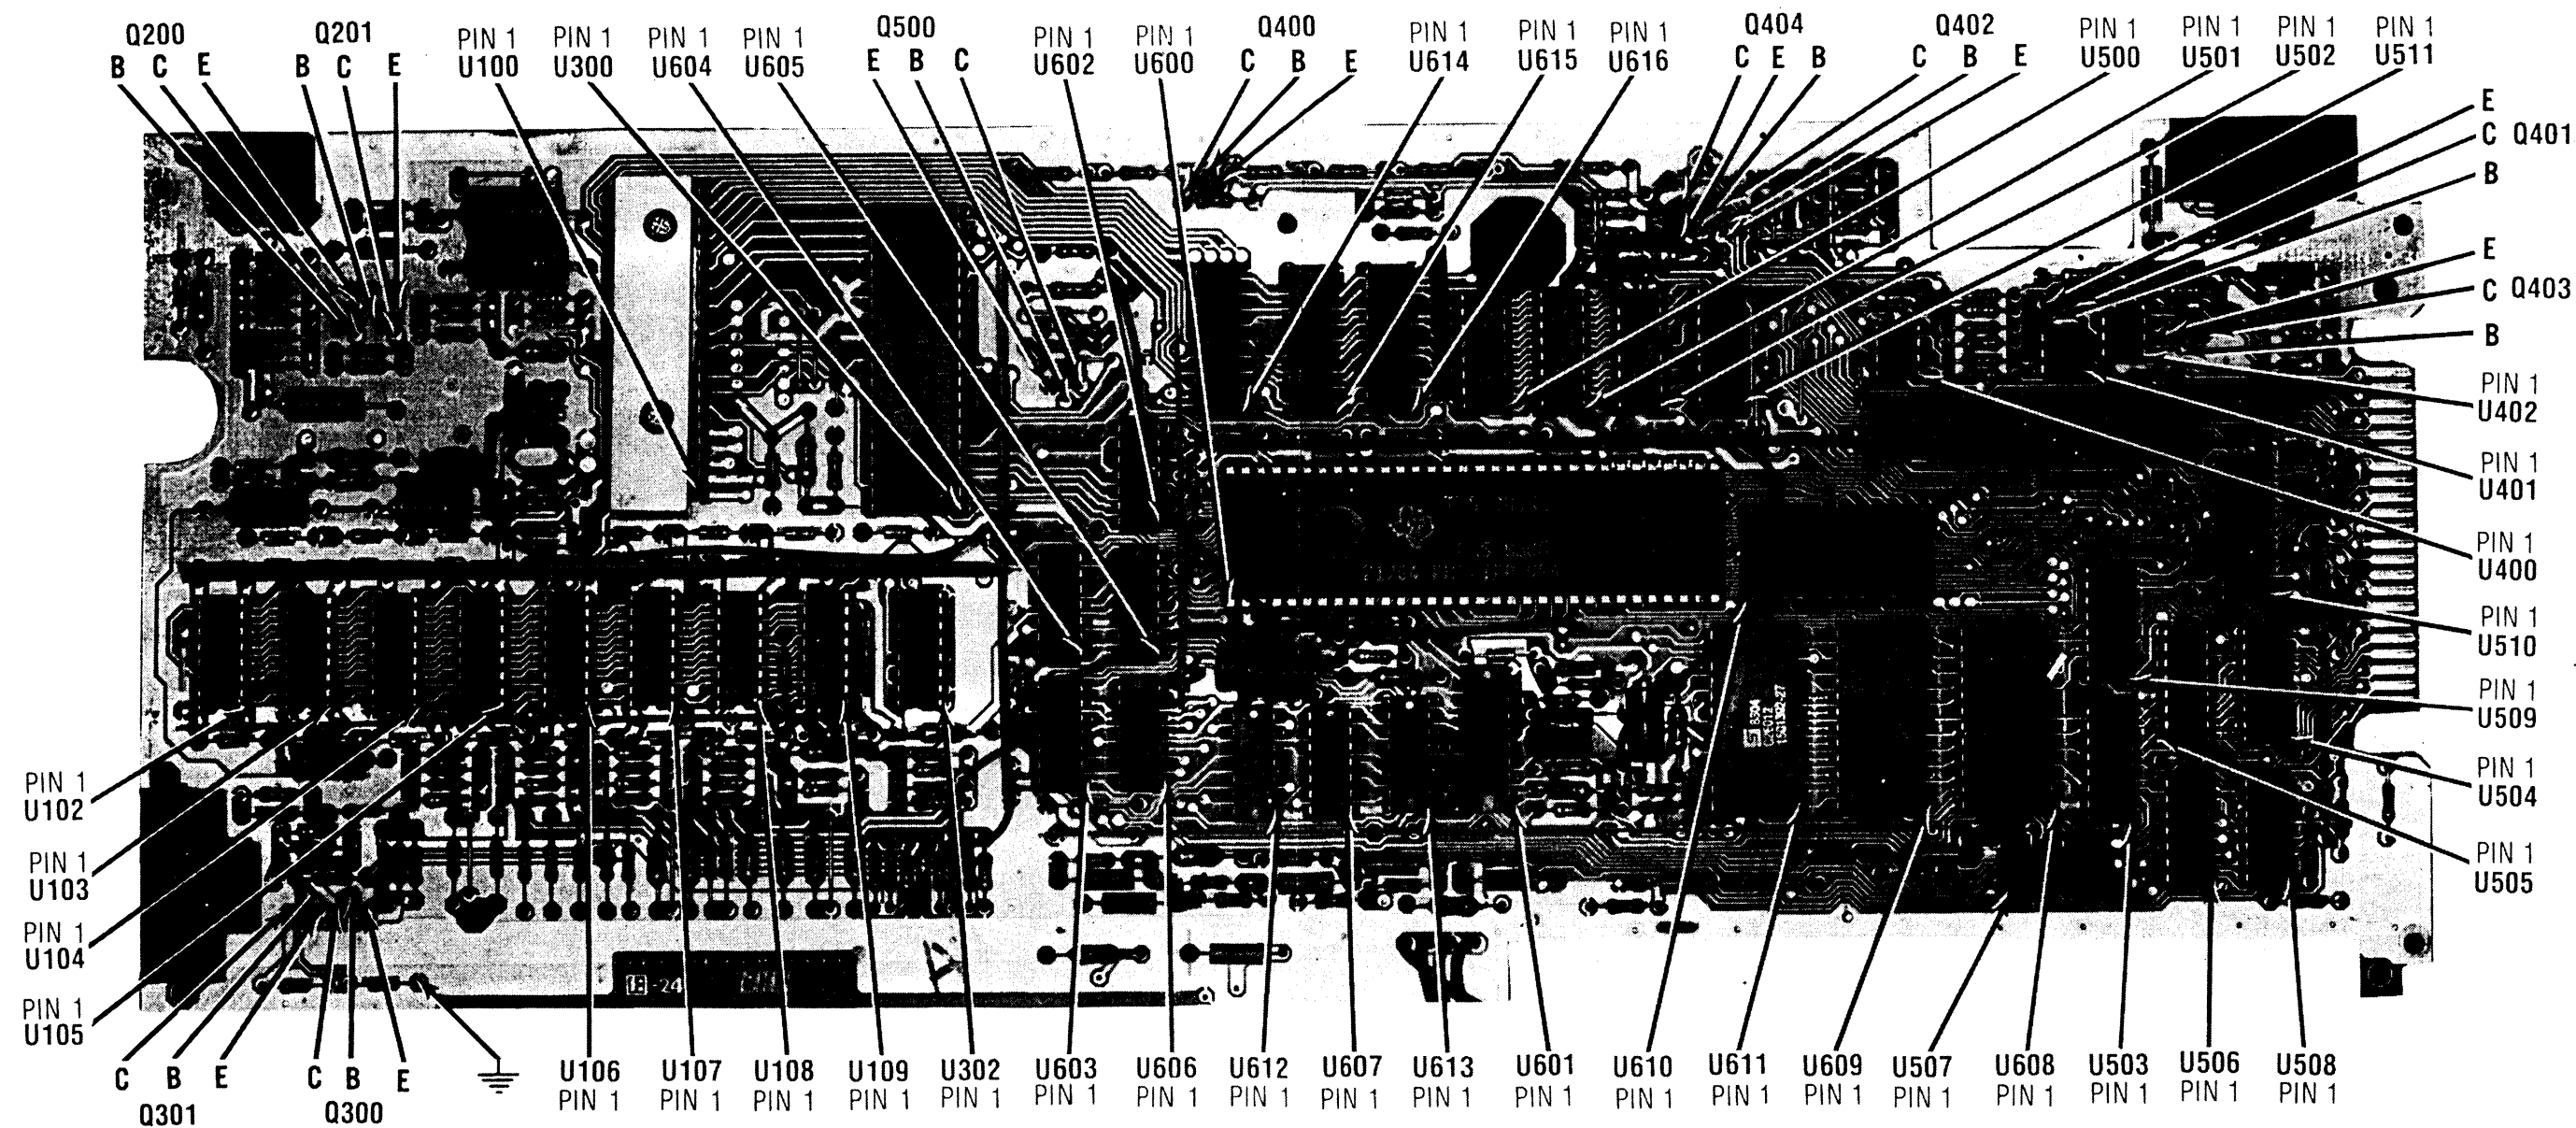

TEXAS INSTRUMENTS
TI-99/4A MODEL PHC004A

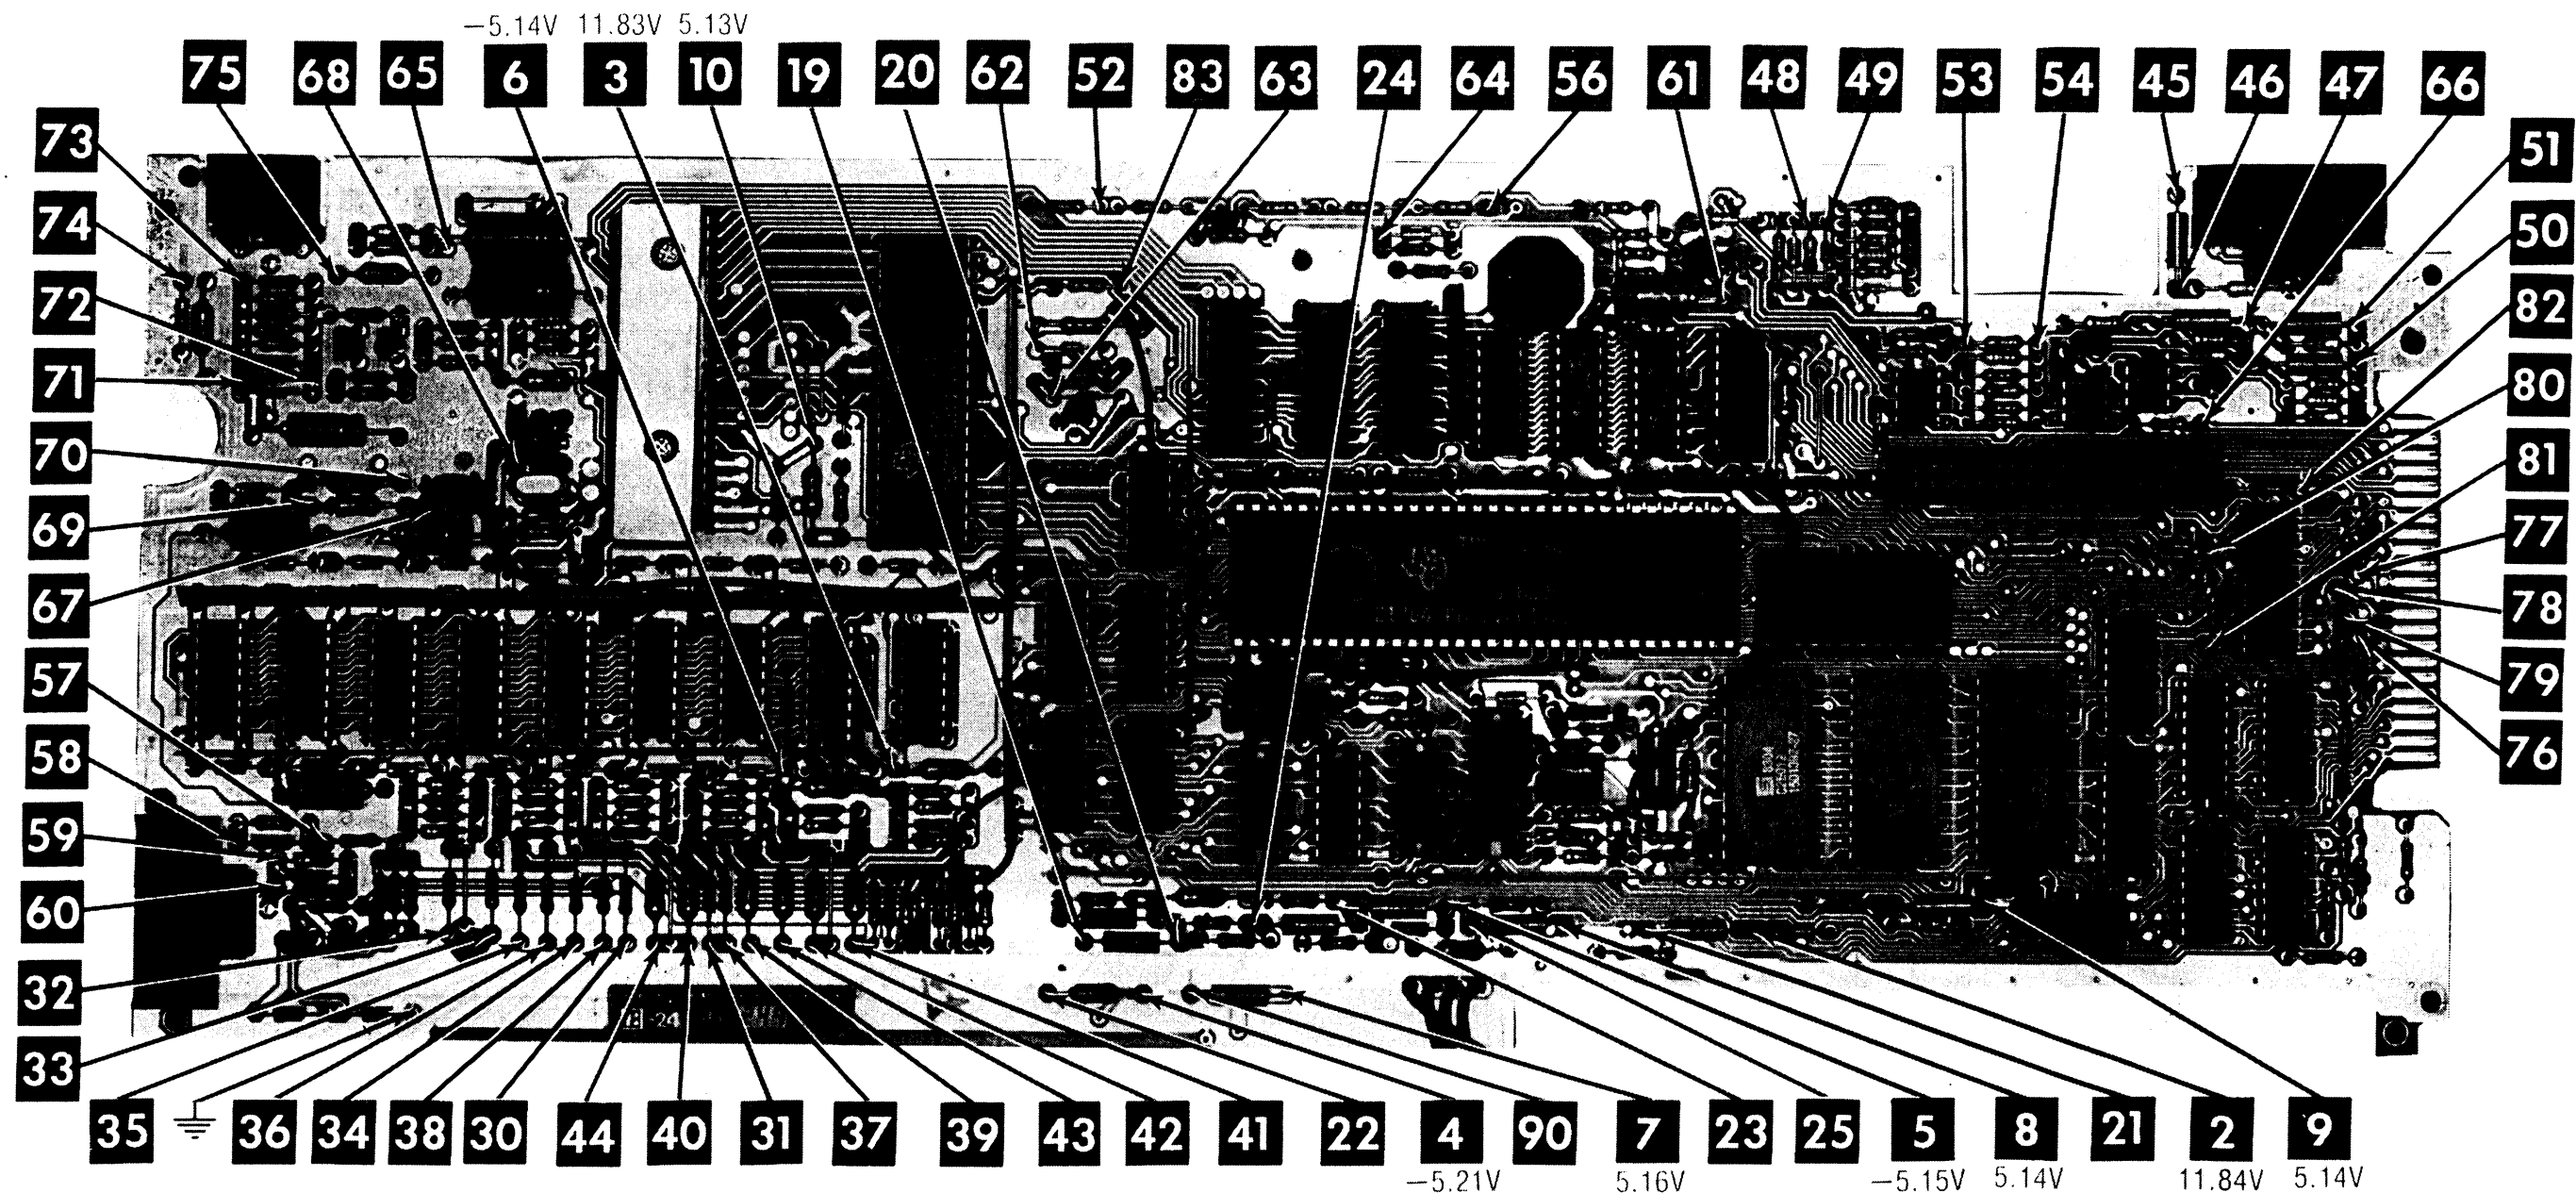

TEXAS INSTRUMENTS
CC 2 TI-99/4A MODEL PHC004A

MAIN BOARD


30

A Howard W. Sams CIRCUITRACE® Photo

MAIN BOARD




COMPUTERFACTS-OF-THE-MONTH SET NO. CF1 FOLDER CC 2

7

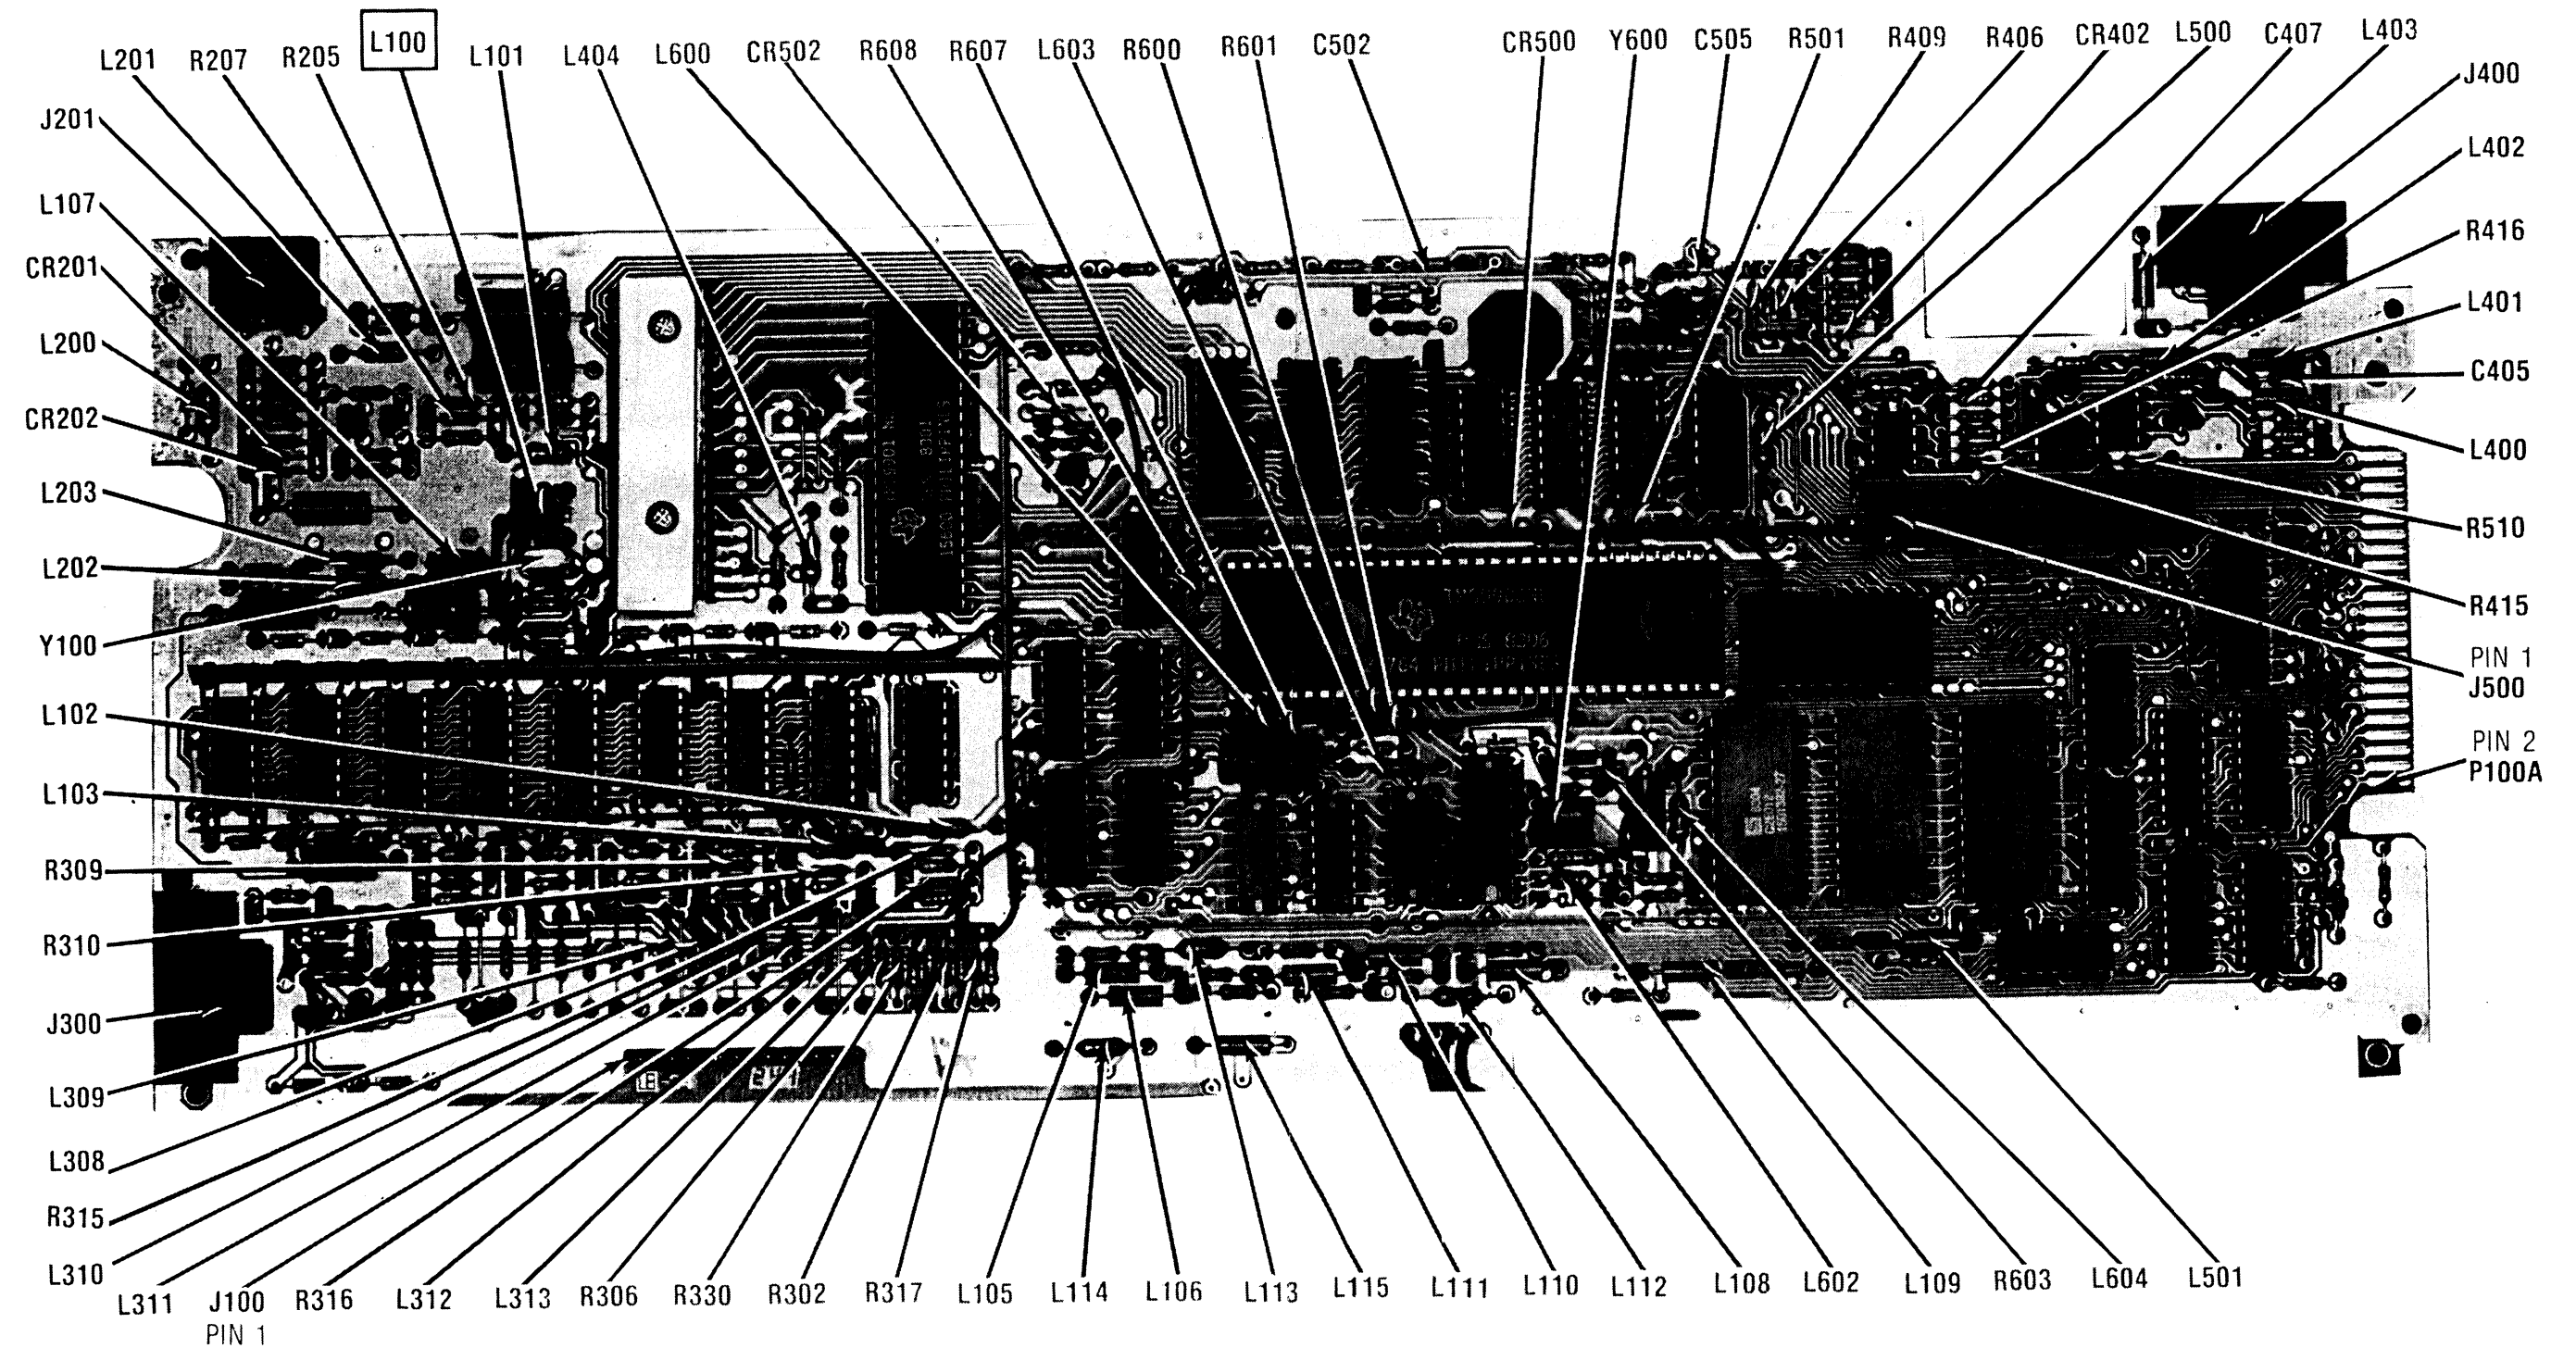

TEXAS INSTRUMENTS
TI-99/4A MODEL PHC004A

TEXAS INSTRUMENTS
CC 2 TI-99/4A MODEL PHC004A

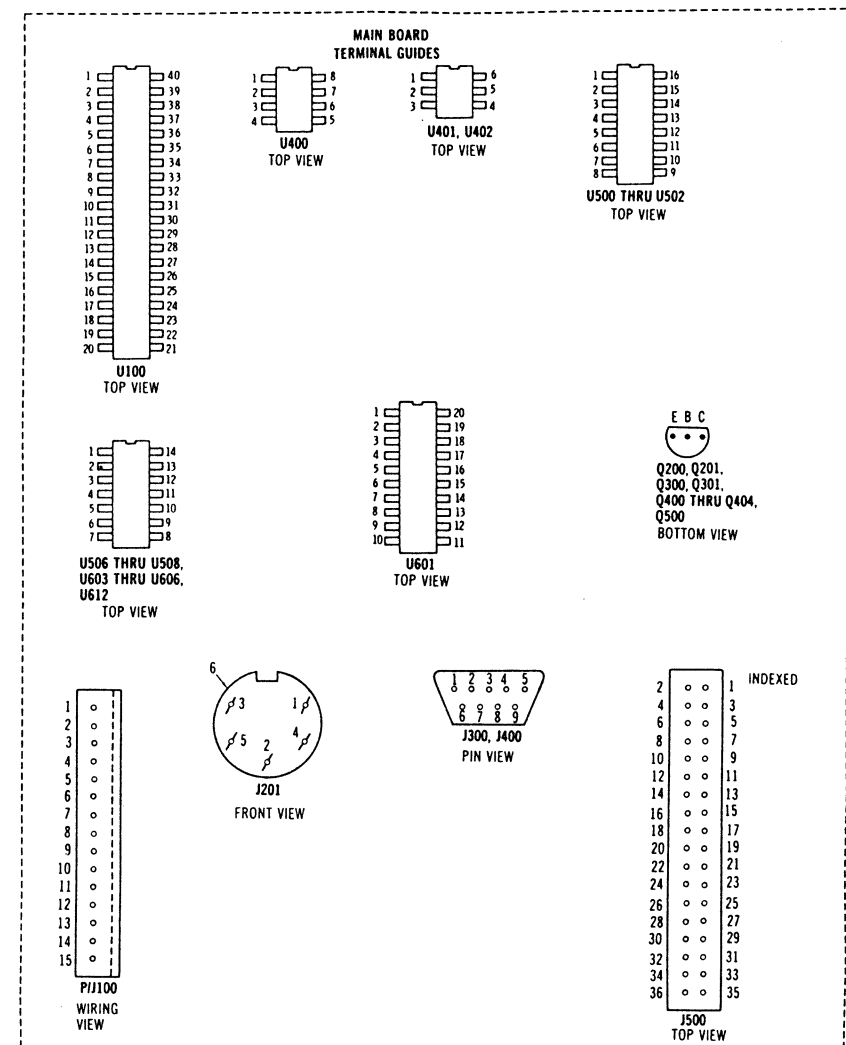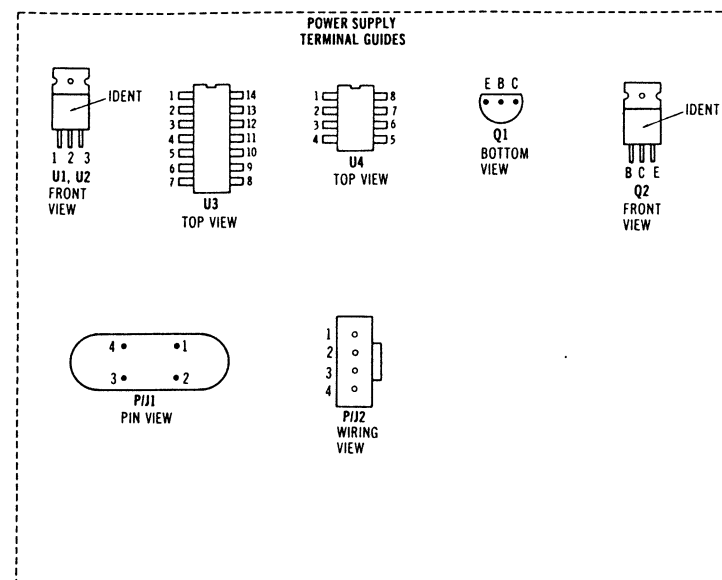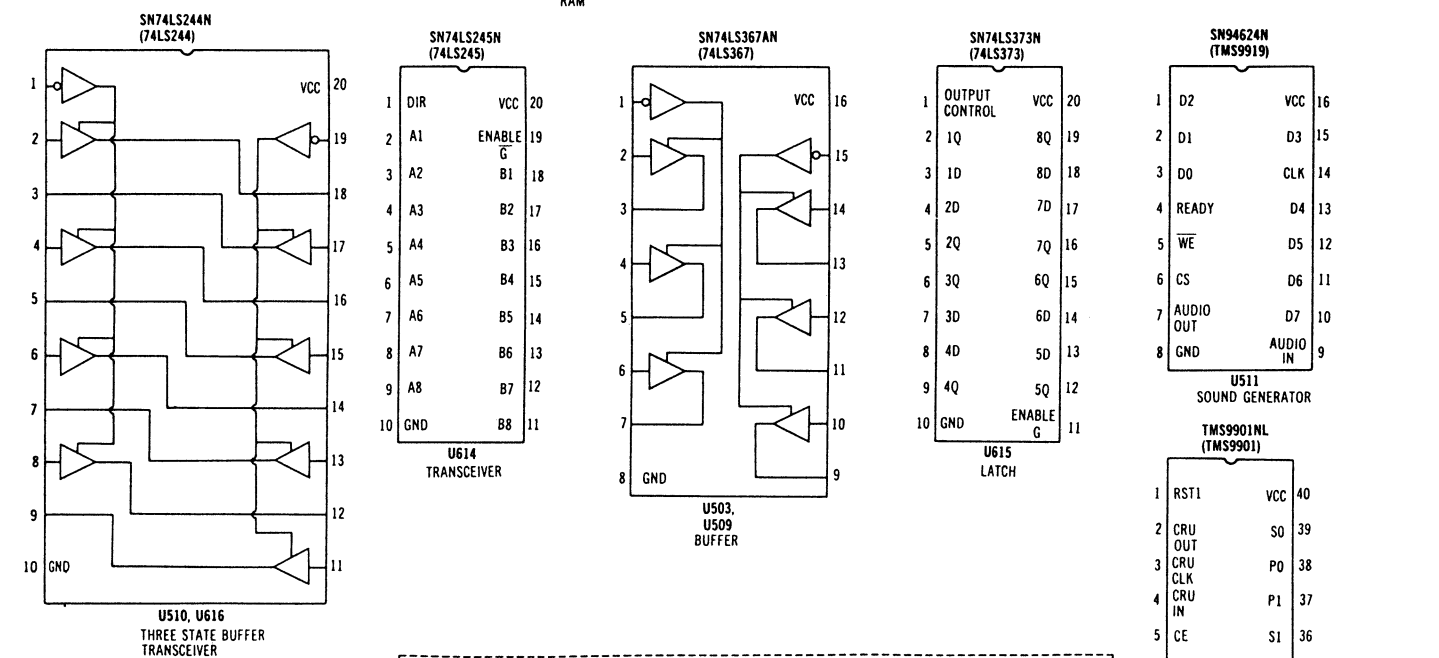

✕ Circuitry not used in some versions
 --- Circuitry used in some versions
 ⊖ See parts list
 ⏏ Ground

- (1) Probe will show P when sound is being produced.
- (2) Probe will show P when the 6 key is pressed.
- (3) Probe will show P when the Y key is pressed.
- (4) Probe will show P when the H key is pressed.
- (5) Probe will show P when the N key is pressed.
- (6) Probe will show P when the Z key is pressed.
- (7) Probe will show P when the Q key is pressed.
- (8) Probe will show P when the A key is pressed.
- (9) Probe will show P when the 2 key is pressed.
- (10) Probe will show P when saving program to tape.
- (11) Probe will show P when loading program from tape.

GENERAL OPERATING INSTRUCTIONS

POWER UP

When the computer is turned On, the main title screen will be displayed on the monitor. Press any key and a menu will be displayed.

The menu choices will be determined by the Solid State Cartridge used. Turn the computer Off when inserting or removing a Solid State Cartridge. Refer to the menu and press the key for the desired function.

For instructions to load and save programs on cassette tape, refer to "Cassette Operation". Run a basic program by typing RUN and press the ENTER key. Stop a program by holding down the FCTN key and press the number 4 key. The computer will return to the basic mode and the program will be unaffected. Reset the computer by holding down the FCTN key and press the = key. The computer will return to the main title screen and any program in memory will be lost.

CASSETTE OPERATION

Connect the cassette cable to the cassette plug on the rear of the computer. Connect the plug with the red wire to the Mic input on the recorder, the plug with the white wire to the Ear-

phone output on the recorder and the plug with the black wire to the Remote input on the recorder.

NOTE: The remote control may not work on some recorders.

Set the Tone control on the recorder to Maximum and the volume control to mid-range. Verify the ALPHA LOCK key, on the computer, is in the down position and put the computer in BASIC mode.

Save a program by typing SAVE CS1, press the ENTER key and follow the instructions that appear on the monitor screen.

Load a program by typing OLD CS1, press the ENTER key and follow the instructions that appear on the monitor screen. If a program will not load, set the Volume control to a different level and try loading the program again.

When using two recorders, the recorder connected to the three plug section of the cable will be CS1 and the recorder connected to the two plug section will be CS2. CS2 can be used for saving programs or data only. Save a program on CS2 by typing SAVE CS2, press the ENTER key and follow the instructions that appear on the monitor.

DISASSEMBLY INSTRUCTIONS

CABINET BOTTOM REMOVAL

Remove the On-Off knob. Remove Phillips screws 1 thru 7 (See Figure 1) from the bottom and remove the cabinet bottom.

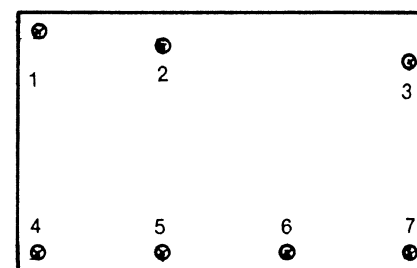



Figure 1
BOTTOM VIEW

POWER SUPPLY BOARD REMOVAL

Remove Phillips screws 7 and 8 (See Figure 2) from the power supply board. Lift the board up, unplug the cable going to the main board and remove the power supply board.

MAIN BOARD REMOVAL

Remove Phillips screws 1, 2 and 3 (See Figure 2) holding the main board. Lift up the main board, unplug the keyboard and remove the main board.

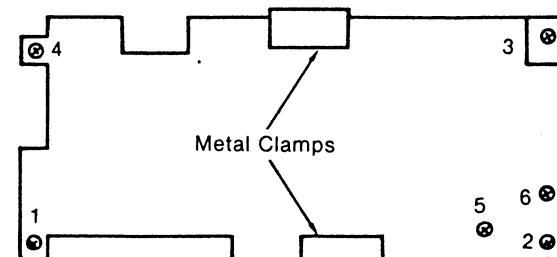

To remove the shield, remove the two metal clamps (See Figure 2) and unplug the cartridge plug. Remove Phillips screws and nuts 4, 5 and 6 (See Figure 2) and remove the top and bottom shield.


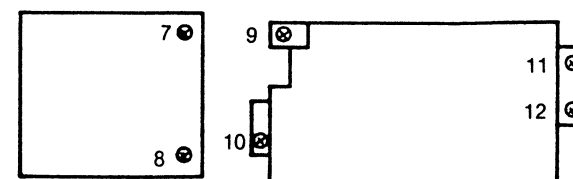


Figure 2
BOTTOM VIEW

KEYBOARD REMOVAL

Remove Phillips screws 9 thru 12 (See Figure 2) holding the keyboard. Unplug the keyboard from the main board and remove the keyboard.

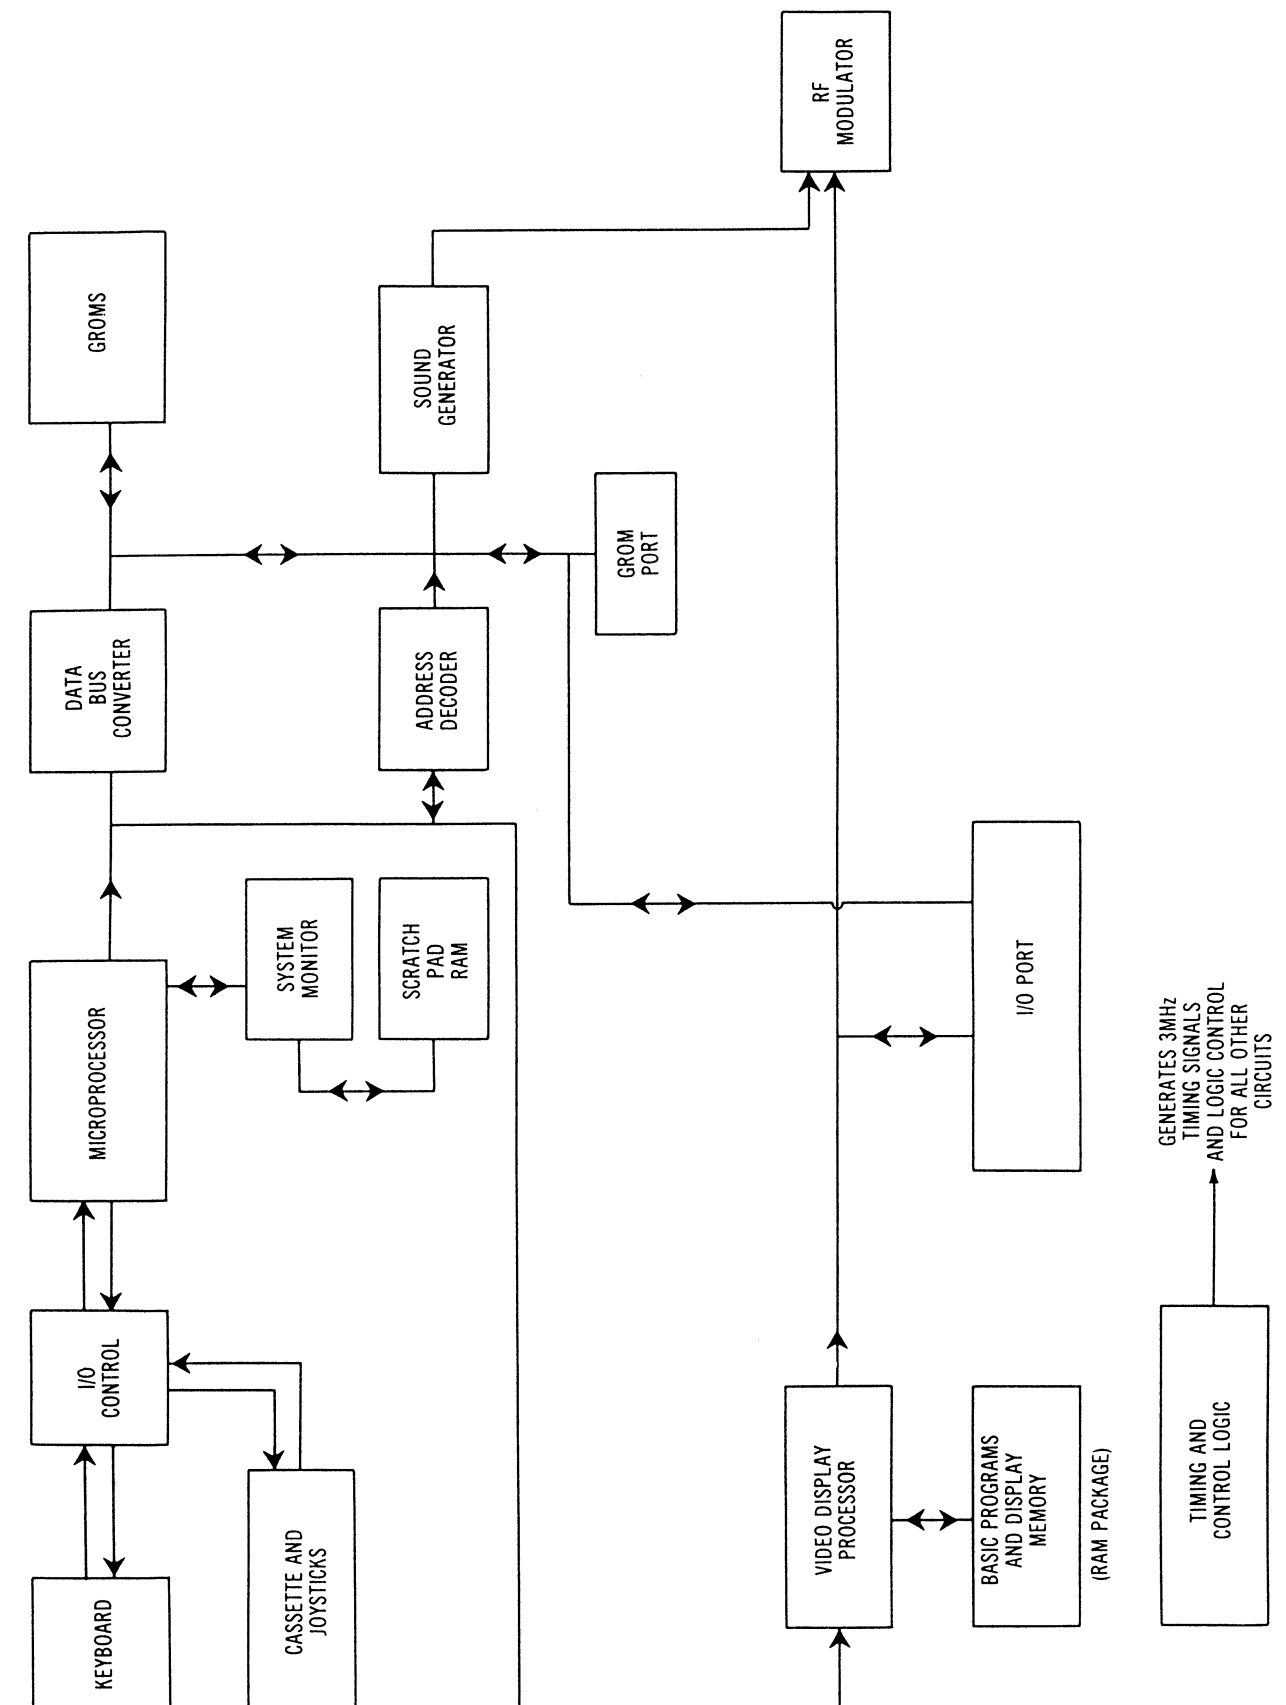

TEXAS INSTRUMENTS
TI-99/4A MODEL PHC004A

BLOCK DIAGRAM

LOGIC (Continued)

PIN NO.	IC U614	IC U615	IC U616	LEAD	Q200	Q201	Q300	Q301
1	P	P	P	E	P	P	H	P
2	P	P	P	B	P	P	H	P
3	P	P	P	C	P	H	H	H
4	P	P	P					
5	P	P	P					
6	P	P	P					
7	P	P	P					
8	P	P	P					
9	P	P	P					
10	L	L	L					
11	P	P	P					
12	P	P	P					
13	P	P	P					
14	P	P	P					
15	P	P	P					
16	P	P	P					
17	P	P	P					
18	P	P	P					
19	P	P	P					
20	H	H	H					

NOTE: Logic probe readings taken with computer in Power Up mode (Main title screen displayed) unless otherwise noted.

Logic Probe Display

L = Low

H = High

P = Pulse

SAFETY PRECAUTIONS

1. Use an isolation transformer for servicing.
2. Maintain AC line voltage at rated input.
3. Remove AC power from the computer before servicing or installing electrostatically sensitive devices. Examples of typical ES devices are integrated circuits and semiconductor "chip" components.
4. Use extreme caution when handling the printed circuit boards. Some semiconductor devices can be damaged easily by static electricity. Drain off any electrostatic charge on your body by touching a known earth ground. Wear a commercially available discharging wrist strap device. This should be removed prior to applying power to the unit under test.
5. Use a grounded-tip, low voltage soldering iron.
6. Use an isolation (times 10) probe on scope.
7. Do not remove or install boards, floppy disk drives, printers, or other peripherals with computer AC power On.
8. Do not use freon-propelled sprays. These can generate electrical charges sufficient to damage semiconductor devices.
9. This computer is equipped with a grounded three-pronged AC plug. This plug must fit into a grounded AC power outlet. Do not defeat the AC plug safety feature.
10. Periodically examine the AC power cord for damaged or cracked insulation.
11. The computer cabinet is equipped with vents to prevent heat build-up. Never block, cover, or obstruct these vents.
12. Instructions should be given, especially to children, that objects should not be dropped or pushed into the vents of the cabinet. This could cause shock or equipment damage.
13. Never expose the computer to water. If exposed to water turn the unit Off. Do not place the computer near possible water sources.
14. Never leave the computer unattended or plugged into the AC outlet for long periods of time. Remove AC plug from AC outlet during lightning storms.
15. Do not allow anything to rest on AC power cord.
16. Unplug AC power cord from outlet before cleaning computer.
17. Never use liquids or aerosols directly on the computer. Spray on cloth and then apply to the computer cabinet. Make sure the computer is disconnected from the AC power line.

LINE DEFINITIONS

A0 Thru A15	Address Lines	MEMEN	Memory Enable
A0D7 Thru A6D1	Combined Address and Data Lines	R/W	Read/Write
A3B Thru A14B	Buffered Address Lines	RAM BLK	RAM Blanking
A15 CRU	Communications Register Unit Address 15	RAS	Row Address Strobe
CAS	Column Address Strobe	READY	Ready for Memory Access
CD0 Thru CD15	Converted Data Lines	RESET	Reset Computer and Peripherals
CRU CLK	Communication Register Unit Clock	ROMEN	ROM Enable
CRU IN	Communication Register Unit Data Input	RST 1	Reset
CRU OUT	Communication Register Unit Data Output	SBE	Speech Block Enable
CSR	Chip Select Video Display Processor Read	SGC CLK	Central Processing Unit Clock
CSW	Chip Select Video Display Processor Write	SND IN	Audio Input
D0 Thru D7	Bi-Directional Data Lines	SND OUT	Audio Output
DBIN	Data Bus Input	SPEECH	Speech Synthesizer Input
DLY RST	Delayed Reset	SYS RDY	System Ready
EXT INT	External Interrupt	VDP INT	Video Display Processor Interrupt
GROM CLK	Graphics ROM Clock	WE	Write Enable
IAQHA	Instruction Acquisition or Hold A	Ø1	Phase One
INT REQ	Interrupt Request	Ø2	Phase Two
LOAD	CPU executes a Non-Maskable Interrupt	Ø3	Phase Three
MBE	Memory Block Enable	Ø4	Phase Four
MB4	Memory Block Four		

Any Bar above any alphabetical or numerical combination indicates line active in a low (0) state.

TROUBLESHOOTING

MICROPROCESSOR CHIP (CPU) OPERATION

Verify the processor is functioning by checking the signals on the address lines (pins 10 thru 24 of IC U600) and the data lines (pins 41 thru 56) using a logic probe or a scope. If a logic probe is used, refer to the "Logic Chart" for the correct readings. If a scope is used, the waveforms on the address lines (except pins 22 and 23 which have no signal in Power Up mode) should be similar to Figure 1. The waveforms on the data lines should be similar to Figure 2.

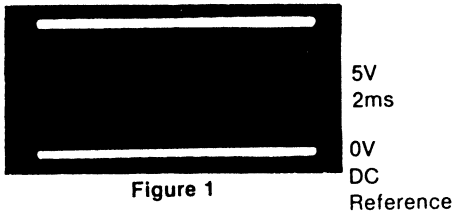


Figure 1

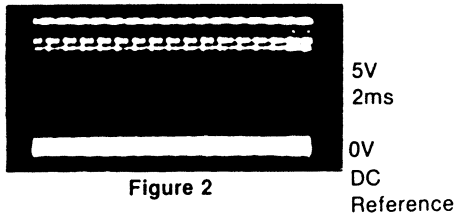


Figure 2

If the processor is not functioning, check the source voltages at pins 1, 2, 27, 33 and 59. Check the 48 MHz Oscillator Crystal (Y600) by checking the waveforms at pins 1 and 18 of IC U601. The frequency at pin 1 of IC U601 should measure 12.00MHz. Check the phase relationships of the $\phi 1$, $\phi 2$, $\phi 3$ and $\phi 4$ clocks at pins 12, 11, 8 and 9 of IC U601 (See Figure 3). Check the phase relationships of the $\phi 1$, $\phi 2$, $\phi 3$ and $\phi 4$ clocks at pins 14, 15, 7 and 6 of IC U601 (See Figure 4). Use a logic probe and check the readings at pins 4 thru 9, 25, 28, 29 and 61 thru 64 of IC U600 (See "Logic Chart").

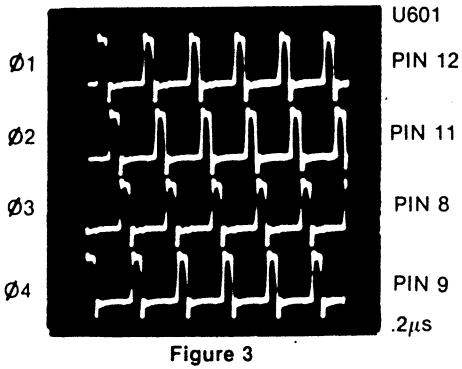


Figure 3

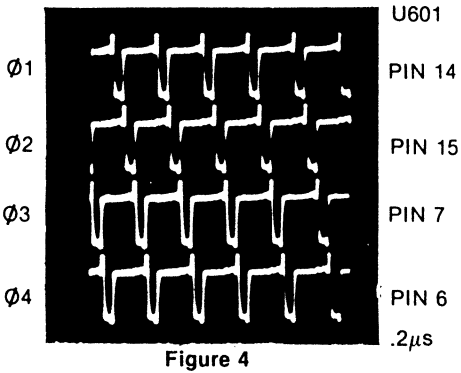


Figure 4

CRYSTAL OSCILLATORS

Connect a frequency counter to pin 1 of IC U601 to check the 48 MHz oscillator. The frequency should read 12.00 MHz. Connect a frequency counter to pin 39 of IC U100 to check the 10.7 MHz oscillator. The frequency should read 10.738635 MHz. The frequency of the 10.7 MHz oscillator can be adjusted by Coil L100.

VIDEO SIGNALS

Verify the operation of the video circuits by checking the waveforms at pin 36 of IC U100 and pin 4 of Jack J201. If the waveform is absent at pin 36 of IC U100, check the 10.7 MHz oscillator at pins 39 and 40 of IC U100 and check pins 1 thru 38 with a logic probe (See the "Logic Chart"). If the waveform at pin 4 of J201 is absent, check the voltages and components associated with Amp Transistor (Q200) and Predriver Transistor (Q201).

SOUND

Type in and run the following program if there is no sound. Check for a .7V p-p waveform at pin 7 of IC U511.

1 CALL SOUND (-400,200,2)
2 GOTO 1

If the waveform is present, check Capacitors C502, C503, C206 and C208 and Coil L201. If the waveform is absent, use a logic probe and check pins 1 thru 14 of IC U511. The readings should be the same as given in the "Logic Chart", except pin 6 will show pulses while the program is running. Check the clock waveform on pin 14 with a scope.

KEYBOARD

The computer comes up with the main title screen displayed on the monitor, but the keyboard has no effect when the keys are pressed. Check the waveforms on pins 1, 3, 6, 7, 9, 10, 11, 12 and 13 of IC U302 and pins 6, 7, 8, 9, 20, 31, 32, 33 and 34 of IC U300. Use a logic probe and check the readings on pins 1 thru 5, 10, 11, 17, 18, 24, 25, 35, 36, 39 and 40 of IC U300 (See "Logic Chart").

LOGIC (Continued)

PIN NO.	IC U507	IC U508	IC U509	IC U510	IC U511	PIN NO.	IC U600	PIN NO.	IC U600	PIN NO.	IC U600	PIN NO.	IC U600
1	P	P	L	L	P	1	L	21	P	41	P	61	P
2	P	P	P	L	P	2	H	22	L	42	P	62	P
3	P	H	P	H	P	3	P	23	L	43	P	63	P
4	H	L	P	L	P	4	H	24	P	44	P	64	H
5	P	L	P	P	P	5	L	25	P	45	P		
6	H	H	P	P	H	6	H	26	L	46	P		
7	L	L	P	P	H(1)	7	P	27	H	47	P		
8	P	P	L	P	L	8	P	28	H	48	P		
9	P	P	P	P	L	9	P	29	P	49	P		
10	P	P	P	L	P	10	P	30	P	50	P		
11	P	P	P	P	P	11	P	31	P	51	P		
12	P	P	P	P	P	12	P	32	P	52	P		
13	P	P	P	P	P	13	P	33	H	53	P		
14	H	H	P	P	P	14	P	34	L	54	P		
15			L	P	P	15	P	35	L	55	P		
16			H	L	H	16	P	36	L	56	P		
17				H		17	P	37	L	57	*		
18				L		18	P	38	L	58	*		
19				L		19	P	39	L	59	H		
20				H		20	P	40	L	60	P		

PIN NO.	IC U601	IC U602	IC U603	IC U604	IC U605	IC U606	IC U607	IC U608	IC U609	IC U610	IC U611	IC U612	IC U613
1	L	P	P	P	L	P	H	L	L	P	P	H	P
2	L	P	P	P	P	P	P	P	P	P	P	P	L
3	L	P	P	P	P	P	P	P	P	P	P	P	L
4	H	P	P	P	P	P	P	P	P	P	P	P	L
5	H	P	P	*	P	P	P	P	P	P	P	P	L
6	P	P	P	L	P	P	P	P	P	P	P	P	*
7	P	L	L	L	L	L	L	P	P	P	P	L	*
8	P	P	P	P	P	P	P	P	P	P	P	H	L
9	P	P	P	P	P	P	P	P	P	P	P	L	P
10	L	P	P	H	P	P	H	H	H	P	P	L	P
11	P	P	P	L	P	P	P	L	L	P	P	P	P
12	P	P	P	H	P	P	P	L	L	P	P	P	P
13	H	P	P	L	P	P	H	L	L	P	P	H	P
14	P	H	H	H	H	H	H	L	L	P	P	P	P
15	P							L	L	P	P	P	P
16	P							P	P	P	P	P	H
17	H							P	P	P	P	P	P
18	L							P	P	P	P	P	P
19	L							P	P	P	P	P	P
20	H							P	P	P	P	P	P
21								P	P	L	L		
22								P	P	P	P		
23								P	P	P	P		
24								H	H	H	H		

NOTE: Logic probe readings taken with computer in Power Up mode (Main title screen displayed) unless otherwise noted.
Logic Probe Display
L = Low

H = High
P = Pulse
* = Open (no light on)
(1) Probe will show P when sound is being produced.

LOGIC

PIN NO.	IC U100	PIN NO.	IC U100	PIN NO.	IC U102	IC U103	IC U104	IC U105	IC U106	IC U107	IC U108	IC U109
1	P	21	P	1	L	L	L	L	L	L	L	L
2	P	22	P	2	P	P	P	P	P	P	P	P
3	P	23	P	3	H	H	H	H	H	H	H	H
4	P	24	P	4	P	P	P	P	P	P	P	P
5	P	25	P	5	P	P	P	P	P	P	P	P
6	P	26	P	6	P	P	P	P	P	P	P	P
7	P	27	P	7	P	P	P	P	P	P	P	P
8	P	28	P	8	H	H	H	H	H	H	H	H
9	P	29	P	9	H	H	H	H	H	H	H	H
10	P	30	P	10	P	P	P	P	P	P	P	P
11	H	31	P	11	P	P	P	P	P	P	P	P
12	L	32	P	12	P	P	P	P	P	P	P	P
13	P	33	H	13	P	P	P	P	P	P	P	P
14	H	34	H	14	P	P	P	P	P	P	P	P
15	P	35	H	15	P	P	P	P	P	P	P	P
16	P	36	P	16	L	L	L	L	L	L	L	L
17	P	37	P	17								
18	P	38	P	18								
19	P	39	P	19								
20	P	40	P	20								
PIN NO.	IC U300	PIN NO.	IC U300	PIN NO.	IC U302	IC U500	IC U501	IC U502	IC U503	IC U504	IC U505	IC U506
1	H	21	P	1	P	P	P	P	L	L	P	P
2	P	22	P	2	L	P	P	P	P	L	P	P
3	P	23	H	3	P	P	P	P	P	P	P	P
4	P	24	P	4	P	P	P	P	P	P	P	P
5	P	25	P	5	H	P	P	P	P	L	P	P
6	H (2)	26	P	6	P	P	P	P	P	H	P	P
7	H (3)	27	L	7	P	P	P	P	P	H	P	L
8	H (4)	28	*(10)	8	L	P	P	P	L	L	L	L
9	H (5)	29	H	9	P	H	H	H	P	H	P	H
10	P	30	L (11)	10	P	P	P	P	P	H	H	P
11	P	31	H (6)	11	P	P	P	P	P	H	H	P
12	P	32	H (7)	12	P	P	P	P	P	H	H	P
13	H	33	H (8)	13	P	P	P	P	P	H	P	P
14	P	34	H (9)	14	L	L	L	L	P	H	H	H
15	P	35	P	15	P	P	P	P	L	P	H	H
16	L	36	P	16	H	L	L	L	H	H	H	H
17	H	37	*	17								
18	P	38	L	18								
19	H	39	P	19								
20	H	40	H	20								

NOTE: Logic probe readings taken with computer in Power Up mode (Main title screen displayed) unless otherwise noted.

Logic Probe Display

L = Low

H = High

P = Pulse

* = Open (no light on)

(2) Probe will show P when the 6 key is pressed.

- (3) Probe will show P when the Y key is pressed.
- (4) Probe will show P when the H key is pressed.
- (5) Probe will show P when the N key is pressed.
- (6) Probe will show P when the Z key is pressed.
- (7) Probe will show P when the Q key is pressed.
- (8) Probe will show P when the A key is pressed.
- (9) Probe will show P when the 2 key is pressed.
- (10) Probe will show P when saving program to tape.
- (11) Probe will show P when loading program from tape.

JOYSTICKS

Type in and run the following program if the keys on the keyboard function but the joysticks do not. Check for the waveform shown in Figure 5 at the emitters of Joystick Control 1 and 2 Transistors (Q300 and Q301).

- 1 CALL JOYST (1, X, Y)
- 2 CALL JOYST (2, X, Y)
- 3 CALL KEY (1, X, Y)
- 4 CALL KEY (2, X, Y)
- 5 GOTO 1

The waveform shown in Figure 6 should appear at the emitters of Transistors Q300 and Q301 when the fire button is pressed. Transistor Q300 controls Joystick 1 and Transistor Q301 controls Joystick 2. If either waveform is absent, check the voltages and components associated with the transistor with the missing waveform.

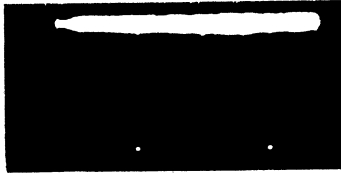


Figure 5

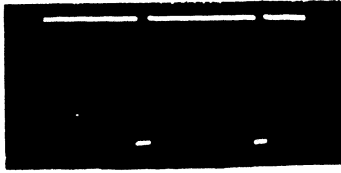


Figure 6

CASSETTE RECORDER

NOTE: Verify the recorder used can be turned On and Off by a computer in good working order. CS1 is the recorder connected to the three plug cassette cable. CS2 is the recorder connected to the two plug cassette cable.

The computer will not turn On CS1. Check the voltages and components associated with the Control Output Transistor (Q401), LED Driver Transistor (Q402) and Opto-isolator U401.

The computer will not turn Off CS1. Check for .02V at pin 19 of IC U300 when the recorder should be Off. If the voltage is good, check Transistor Q401, Transistor Q402 and Opto-isolator U401.

The computer will not turn On CS2. Check the voltages and components associated with the Control Output Transistor (Q403), LED Driver Transistor (Q404) and Opto-isolator U402.

The computer will not turn Off CS2. Check for .02V at pin 23 of IC U300 when the recorder should be Off. If the voltage is good, check Transistors Q403 and Q404 and Optoisolator U402.

The computer will not load a program. Check the waveforms at pin 8 of Jack J400, pin 7 of IC U400 and pin 30 of IC U300 while loading a program. NOTE: The amplitude of the waveforms depends on the volume control setting of the recorder. If the waveform at pin 8 of J400 is absent, check Capacitor C402 and check for possible shorts to ground. If the waveform at pin 7 of IC U400 is absent, check the voltages and components associated with pins 4, 6, 7 and 8 of IC U400. If the waveform at pin 30 of IC U300 is absent, check the voltages and components associated with pins 1, 2, 3, 4 and 8 of IC U400.

The computer will not save a program. Check the waveform at pin 28 of IC U300 while saving a program. If the waveform is good, check Capacitors C400, C403 and C407 and Resistors R400, R401 and R402.

RF MODULATOR

Verify the RF Modulator is getting the proper voltages and signals by checking for 11.78V at the red wire from the cable, 1.95V at the yellow wire and .54V at the clear wire. The clear wire should also have a 1V p-p video signal.

ADJUSTMENT

10.7 MHz OSCILLATOR

Connect the input of a frequency counter to pin 39 of IC U100 and adjust Coil L100 for a frequency of 10.738635 MHz.

6 PARTS LIST AND DESCRIPTION

When ordering parts, state Model, Part No., and Description

SEMICONDUCTORS (Select replacement for best results)

ITEM No.	TYPE No.	MFR. PART No.	REPLACEMENT DATA							ZENITH PART No.
			EGG PART No.	GENERAL ELECTRIC PART No.	MOTOROLA PART No.	NTE PART No.	RCA PART No.	WORKMAN PART No.		
CR1 thru CR5	1N4003		ECG116	GE-504A	1N4003	NTE116	SK3311	WEP156	212-76-02	
	1N4002		ECG116	GE-504A	1N4002	NTE116	SK3311	WEP155	212-76-02	
	1N4148F		ECG519	GE-514	1N4935	NTE519	SK3100/519	WEP925/519	103-131	
	PG1992		ECG519	GE-514	1N4935	NTE519	SK3100/519	WEP925/519	103-131	
	1N52B		ECG5013A	GEZD-6.2	1N5234B	NTE5013A	SK6A2/5013A	WEP1414/5013	103-Z9008	
CR9 CR10	V331X		ECG552	GE-511		NTE552	SK9000/552	WEP172/506	103-287	
	1N4148F		ECG519	GE-514	1N4935	NTE519	SK3100/519	WEP925/519	103-131	
	PG1992		ECG519	GE-514	1N4935	NTE519	SK3100/519	WEP925/519	103-131	
	1N4148F		ECG519	GE-514	1N4935	NTE519	SK3100/519	WEP925/519	103-131	
	1N4148		ECG519	GE-514	1N4935	NTE519	SK3100/519	WEP925/519	103-131	
CR200,1	1N4148		ECG519	GE-514	1N4935	NTE519	SK3100/519	WEP925/519	103-131	
	1N4148		ECG519	GE-514	1N4935	NTE519	SK3100/519	WEP925/519	103-131	
	1N4148		ECG519	GE-514	1N4935	NTE519	SK3100/519	WEP925/519	103-131	
	1N4148		ECG519	GE-514	1N4935	NTE519	SK3100/519	WEP925/519	103-131	
	1N914B		ECG177	GE-300	1N4935	NTE177	SK9091/177	WEP1062/177	103-131	
CR402	1N4148		ECG519	GE-514	1N4935	NTE519	SK3100/519	WEP925/519	103-131	
	PG1992		ECG519	GE-514	1N4935	NTE519	SK3100/519	WEP925/519	103-131	
	1N4148		ECG519	GE-514	1N4935	NTE519	SK3100/519	WEP925/519	103-131	
	PG1992		ECG519	GE-514	1N4935	NTE519	SK3100/519	WEP925/519	103-131	
	1N4148		ECG519	GE-514	1N4935	NTE519	SK3100/519	WEP925/519	103-131	
CR501,2	1N4148		ECG519	GE-514	1N4935	NTE519	SK3100/519	WEP925/519	103-131	
	1N4148		ECG519	GE-514	1N4935	NTE519	SK3100/519	WEP925/519	103-131	
	1N4148		ECG519	GE-514	1N4935	NTE519	SK3100/519	WEP925/519	103-131	
	1N4148		ECG519	GE-514	1N4935	NTE519	SK3100/519	WEP925/519	103-131	
	1N914B		ECG177	GE-300	1N4935	NTE177	SK9091/177	WEP1062/177	103-131	
Q1	578-2303		ECG159	GE-82	2N5401	NTE159	SK3466/159	WEP62/159	121-Z9003	
	TIS93		ECG159	GE-82	2N5401	NTE159	SK3466/159	WEP62/159	121-Z9003	
	TIP31A		ECG291	GE-302	MJE15030	NTE291	SK3893/152	WEP780/291	121-Z9047	
	TIP31		ECG291	GE-302	MJE15030	NTE291	SK3893/152	WEP780/291	121-Z9047	
	2N3906		ECG159	GE-82	2N5401	NTE159	SK3466/159	WEP62/159	121-Z9003	
Q201	2472222		ECG123AP	GE-123AP	MPSA05	NTE123AP	SK3854/123AP	WEP736/123A	121-Z9000A	
	2N2222		ECG123A	GE-20	MPSA05	NTE123A	SK3444/123A	WEP736/123A	121-Z9000A	
	501-4249		ECG123AP	GE-123AP	MPSA05	NTE123AP	SK3854/123AP	WEP736/123A	121-Z9000A	
	501-4249		ECG123AP	GE-123AP	MPSA05	NTE123AP	SK3854/123AP	WEP736/123A	121-Z9000A	
	TIS92		ECG123AP	GE-123AP	MPSA05	NTE123AP	SK3854/123AP	WEP736/123A	121-Z9000A	
Q300,1 Q400 thru Q404	501-4249		ECG123AP	GE-123AP	MPSA05	NTE123AP	SK3854/123AP	WEP736/123A	121-Z9000A	
	TIS92		ECG123AP	GE-123AP	MPSA05	NTE123AP	SK3854/123AP	WEP736/123A	121-Z9000A	
	78M12C		ECG966	GEVR-111	MC7812CT	NTE966	SK3592/966	WEP966L/966	121-Z9000A	
	UA7812C		ECG966	GEVR-111	MC7812CT	NTE966	SK3592/966	WEP966L/966	121-Z9000A	
	UA79M05C		ECG961	GE-961	MC7905CT	NTE961	SK3671/961	WEP966L/966	121-Z9000A	
Q500	501-4249		ECG123AP	GE-123AP	MPSA05	NTE123AP	SK3854/123AP	WEP736/123A	121-Z9000A	
	TIS92		ECG123AP	GE-123AP	MPSA05	NTE123AP	SK3854/123AP	WEP736/123A	121-Z9000A	
	78M12C		ECG966	GEVR-111	MC7812CT	NTE966	SK3592/966	WEP966L/966	121-Z9000A	
	UA7812C		ECG966	GEVR-111	MC7812CT	NTE966	SK3592/966	WEP966L/966	121-Z9000A	
	UA79M05C		ECG961	GE-961	MC7905CT	NTE961	SK3671/961	WEP966L/966	121-Z9000A	

PARTS LIST AND DESCRIPTION (Continued)

When ordering parts, state Model, Part No., and Description

TRANSFORMER (Power)

ITEM No.	RATING			REPLACEMENT DATA		
	PRI.	SEC. 1	SEC. 2	MFGR. PART No.	THORDARSON PART No.	NOTES
T1	120V AC @ 270mA AC	26.40V AC @ 686mA DC Tapped @ 17.85V AC @ 600mA DC				

MISCELLANEOUS

ITEM No.	PART NAME	MFGR. PART No.	NOTES
CR6	LED		TIL220
M1	Switch		RF Modulator
S1	Switch		Part of Keyboard
Thru S48	Switch		
S1A	Crystal		Power
Y100	Crystal		10.7MHz
Y600	Crystal		48MHz

CABINETS & CABINET PARTS (When ordering specify model, chassis & color)

WIRING DATA

General-use Unshielded Hook-up Wire		Use BELDEN No. 8529 (Solid) Available in 13 Colors
		8522 (Stranded) Available in 13 Colors
300-Ohm Input Lead	Use BELDEN No. 8225	
75-Ohm Input Lead	Use BELDEN No. 8241	

PARTS LIST AND DESCRIPTION (Continued)

When ordering parts, state Model, Part No., and Description

ELECTROLYTIC CAPACITORS

ITEM No.	RATING	MFGR. PART No.	ITEM No.	RATING	MFGR. PART No.
C7	47 16V 20%		C129	22 25V 20%	
C8	1000 25V 20%		C130	22 25V	
C9	3300 35V 20%		C201	10 16V 20%	
C10	47 16V 20%		C503	100 16V 20%	
C12	4.7 35V 20%		C506	22 25V	
C15	470 12V		C600	100 16V 20%	
C103	100 16V 20%		C605	1	
C128	22 25V		C606	22 25V 20%	

RESISTORS (Power and Special)

ITEM No.	RATING	REPLACEMENT DATA		
		MFGR. PART No.	WORKMAN PART No.	REMARKS
R500	Resistor Network	1501633-8 (1)		

(1) Number on unit.

COILS (RF-IF)

ITEM No.	FUNCTION	MFGR. PART No.	ITEM No.	FUNCTION	MFGR. PART No.
L1	RF Choke (90uH)		L115	RF Choke	
L2	RF Choke (90uH)		L200	RF Choke (6.8uH)	
L3	RF Choke (90uH)		L201	Peaking (6.8uH)	
L4	RF Choke (1mH)		L202	Peaking (22uH)	
L5	RF Choke (8.2uH)		L203	Peaking (8.2uH)	
L6	RF Choke (8.2uH)		L308	Peaking (6.8uH)	
L100	Oscillator (2-4.5uH)		L309	Peaking (6.8uH)	
L101	RF Choke (6.8uH)		L310	Peaking (6.8uH)	
L102	RF Choke (6.8uH)		L311	Peaking (6.8uH)	
L103	RF Choke (6.8uH)		L312	Peaking (6.8uH)	
L104	RF Choke (6.8uH)		L313	Peaking (6.8uH)	
L105	RF Choke		L400	Peaking	
L106	RF Choke		L401	Peaking	
L107	Peaking		L402	Peaking	
L108	RF Choke		L403	Peaking	
L109	RF Choke		L500	RF Choke (6.8uH)	
L110	RF Choke		L501	RF Choke	
L111	RF Choke		L600	RF Choke (6.8uH)	
L112	RF Choke (6.8uH)		L602	Peaaking (.33uH)	
L113	RF Choke (6.8uH)		L603	RF Choke (6.8uH)	
L114	RF Choke (6.8uH)		L604	RF Choke (6.8uH)	

PARTS LIST AND DESCRIPTION (Continued)

When ordering parts, state Model, Part No., and Description

SEMICONDUCTORS (Select replacement for best results) (cont)

ITEM No.	TYPE No.	MFR. PART No.	REPLACEMENT DATA						
			EGG PART No.	GENERAL ELECTRIC PART No.	MOTOROLA PART No.	NTE PART No.	RCA PART No.	WORKMAN PART No.	ZENITH PART No.
U3	UA723CN		ECG923D	GE IC-260	MC1723CP	NTE923D	SK3165/923D	WEP2331/923D	221-Z9020
U4	UA723C		ECG923D	GE IC-260	MC1723CP	NTE923D	SK3165/923D	WEP2331/923D	221-Z9020
U100	TL331CP								
	TL331								
	TMS9918ANL								
	TMS9918A								
U102 thru	D416C								
U109	TMS4116								
U300	TMS9901NL		ECG2117	GE IC-220	MC1458CP1	NTE2117	SK3465/778A	WEP2053/778A	HE-443-904
	TMS9901		ECG2117	GE IC-220	MC1458CP1	NTE2117	SK3465/778A	WEP2053/778A	HE-443-904
U302	SN74LS156N		ECG74LS156		TIL119	NTE74LS156			
	SN74LS156N								
U400	RC4558P		ECG778A	GE IC-220	MC1458CP1	NTE778A	SK3465/778A	WEP2053/778A	221-Z9034
	4558		ECG778A	GE IC-220	MC1458CP1	NTE778A	SK3465/778A	WEP2053/778A	221-Z9034
U401,2	TIL119		ECG3044		TIL119	NTE3044			
U500	CD2155NL								
	TMC0430								
U501	CD2156NL								
	TMC0430								
U502	CD2157NL								
U503	SN74LS367AN		ECG74LS367		SN74LS367AN	NTE74LS367	SK74LS367		HE-443-857
	74LS367		ECG74LS367		SN74LS367AN	NTE74LS367	SK74LS367		HE-443-857
	SN74LS138N				SN74LS138N	NTE74LS138	SK74LS138		HE-443-877
	74LS138				SN74LS138N	NTE74LS138	SK74LS138		HE-443-877
U506	SN74LS03N		ECG74LS03		SN74LS03N	NTE74LS03	SK74LS03		HE-443-745
	74LS03		ECG74LS03		SN74LS03N	NTE74LS03	SK74LS03		HE-443-745
U507	SN74LS32N		ECG74LS32		SN74LS32N	NTE74LS32	SK74LS32		HE-443-875
	74LS32		ECG74LS32		SN74LS32N	NTE74LS32	SK74LS32		HE-443-875
U508	SN74LS04N		ECG74LS04		SN74LS04N	NTE74LS04	SK74LS04		HE-443-755
	74LS04		ECG74LS04		SN74LS04N	NTE74LS04	SK74LS04		HE-443-755
U509	SN74LS367AN		ECG74LS367		SN74LS367AN	NTE74LS367	SK74LS367		HE-443-857
	74LS367		ECG74LS367		SN74LS367AN	NTE74LS367	SK74LS367		HE-443-857
U510	SN74LS244N		ECG74LS244		SN74LS244N	NTE74LS244	SK74LS244		HE-443-791
	74LS244		ECG74LS244		SN74LS244N	NTE74LS244	SK74LS244		HE-443-791

18 PARTS LIST AND DESCRIPTION (Continued)

When ordering parts, state Model, Part No., and Description

SEMICONDUCTORS (Select replacement for best results) (cont)

ITEM No.	TYPE No.	MFGR. PART No.	REPLACEMENT DATA						ZENITH PART No.
			EGG PART No.	GENERAL ELECTRIC PART No.	MOTOROLA PART No.	NTE PART No.	RCA PART No.	WORKMAN PART No.	
U511	SN94624N								
U600	TMS9919								
U601	TMS9900NL								
	TMS9900								
	TIM9904ANL								
	74LS362								
U602	SN74LS04N		ECG74LS04		SN74LS04N	NTE74LS04	SK74LS04		HE-443-755
U603	74LS04		ECG74LS04		SN74LS04N	NTE74LS04	SK74LS04		HE-443-755
U604	SN74LS00N		ECG74LS00		SN74LS00N	NTE74LS00	SK74LS00		HE-443-728
	74LS00		ECG74LS00		SN74LS00N	NTE74LS00	SK74LS00		HE-443-728
U605	SN74LS04N		ECG74LS04		SN74LS04N	NTE74LS04	SK74LS04		HE-443-755
	74LS04		ECG74LS04		SN74LS04N	NTE74LS04	SK74LS04		HE-443-755
U606	SN74LS32N		ECG74LS32		SN74LS32N	NTE74LS32	SK74LS32		HE-443-875
	74LS32		ECG74LS32		SN74LS32N	NTE74LS32	SK74LS32		HE-443-875
U607	SN74LS00N		ECG74LS00		SN74LS00N	NTE74LS00	SK74LS00		HE-443-728
	74LS00		ECG74LS00		SN74LS00N	NTE74LS00	SK74LS00		HE-443-728
	SN74LS74AN		ECG74LS74A		SN74LS74AN	NTE74LS74A	SK74LS74		HE-443-730
	74LS74		ECG74LS74A		SN74LS74AN	NTE74LS74A	SK74LS74		HE-443-730
U608, 9	MC6810P		ECG6810		MC6810P	NTE6810			
U610	CD3226A-NL								
U611	TMS4732/2532								
	C2E012/8304								
	TMS4732/2532								
U612	SN74LS00N		ECG74LS00		SN74LS00N	NTE74LS00	SK74LS00		HE-443-728
U613	74LS00		ECG74LS00		SN74LS00N	NTE74LS00	SK74LS00		HE-443-728
	SN74LS194AN								
	74LS194								
U614	SN74LS245N		ECG74LS245		SN74LS245N	NTE74LS245	SK74C245		HE-443-885
	74LS245		ECG74LS245		SN74LS245N	NTE74LS245	SK74C245		HE-443-885
U615	SN74LS373N		ECG74LS373		SN74LS373N	NTE74LS373			HE-443-867
	74LS373		ECG74LS373		SN74LS373N	NTE74LS373			HE-443-867
U616	SN74LS244N		ECG74LS244		SN74LS244N	NTE74LS244	SK74LS244		HE-443-791
	74LS244		ECG74LS244		SN74LS244N	NTE74LS244	SK74LS244		HE-443-791

PARTS LIST AND DESCRIPTION (Continued)


When ordering parts, state Model, Part No., and Description

CAPACITORS

ITEM No.	RATING	MFGR. PART No.
C1	.1 50V	
C2	.1 50V	
C3	.1 50V	
C4	.1 50V	
C8	.1 50V	
C11	100 50V 5%	
C13	.1 50V	
C14	.1 50V	
C16	.1 50V	
C17	.1 50V	
C18	.1 50V	
C100	56 NPO 50V 5%	
C101	12 NPO 50V 5%	
C102	.001 50V 10%	
C104	.01 25V	
C105	.1 50V	
C106	.1 50V	
C107	.1 50V	
C108	.1 50V	
C109	.1 50V	
C110	.1 50V	
C111	.1 50V	
C112	.1 50V	
C113	.1 50V	
C114	.1 50V	
C115	.1 50V	
C116	.1 50V	
C117	.1 50V	
C118	.1 50V	
C119	.1 50V	
C120	.1 50V	
C121	.1 50V	
C122	.1 50V	
C123	.1 50V	
C124	.1 50V	
C125	.1 50V	
C126	.1 50V	
C127	.1 50V	
C131	.1 50V	
C132	.01 25V	
C134	.01 25V	
C135	.01 25V	
C136	.01 25V	
C137	.01 25V	
C138	.01 25V	
C139	.01 25V	
C140	.01 25V	
C141	.01 25V	
C142	.01 25V	
C143	.01 25V	
C145	.01 25V	
C200	82 50V 5%	
C202	.01 25V	
C203	.01 25V	
C205	.1 50V	
C206	.001 50V 10%	
C207	.1 50V	

ITEM No.	RATING	MFGR. PART No.
C208	.01 25V	
C300	.01 25V	
C301	.01 25V	
C302	.001 50V 10%	
C303	.001 50V 10%	
C304	.001 50V 10%	
C305	.001 50V 10%	
C306	.001 50V 10%	
C307	.001 50V 10%	
C308	.001 50V 10%	
C309	.001 50V 10%	
C310	.001 50V 10%	
C311	.001 50V 10%	
C312	.001 50V 10%	
C313	.001 50V 10%	
C314	.001 50V 10%	
C315	.001 50V 10%	
C317	.1 50V	
C319	.1 50V	
C320	.001 50V 10%	
C321	.001 50V 10%	
C322	.1 50V	
C331	.001 50V 10%	
C400	.001 50V 10%	
C401	.001 50V 10%	
C402	.001 50V 10%	
C403	.001 50V 10%	
C404	.001 50V 10%	
C405	.001 50V 10%	
C406	.001 50V 10%	
C407	.001 50V 10%	
C408	.01 25V	
C409	.01 15V 5%	
C410	.022 15V 5%	
C411	220 50V 10%	
C412	.1 50V	
C413	.1 50V	
C414	.001 50V 10%	
C415	.01 25V	
C500	.01 25V	
C501	.1 50V	
C502	.1 50V	
C505	.1 50V	
C507	.01 25V	
C508	.1 50V	
O601	.001 50V 10%	
O602	.01 25V	
O603	47 NPO 50V 5%	
	22 50V	
O604	.1 50V	
O607	.001 50V 10%	
O608	.1 50V	
O609	.1 50V	
C610	.1 50V	
O611	.001 50V 10%	
C612	.1 50V	


TEXAS INSTRUMENTS
TI-99/4A MODEL PHC004A

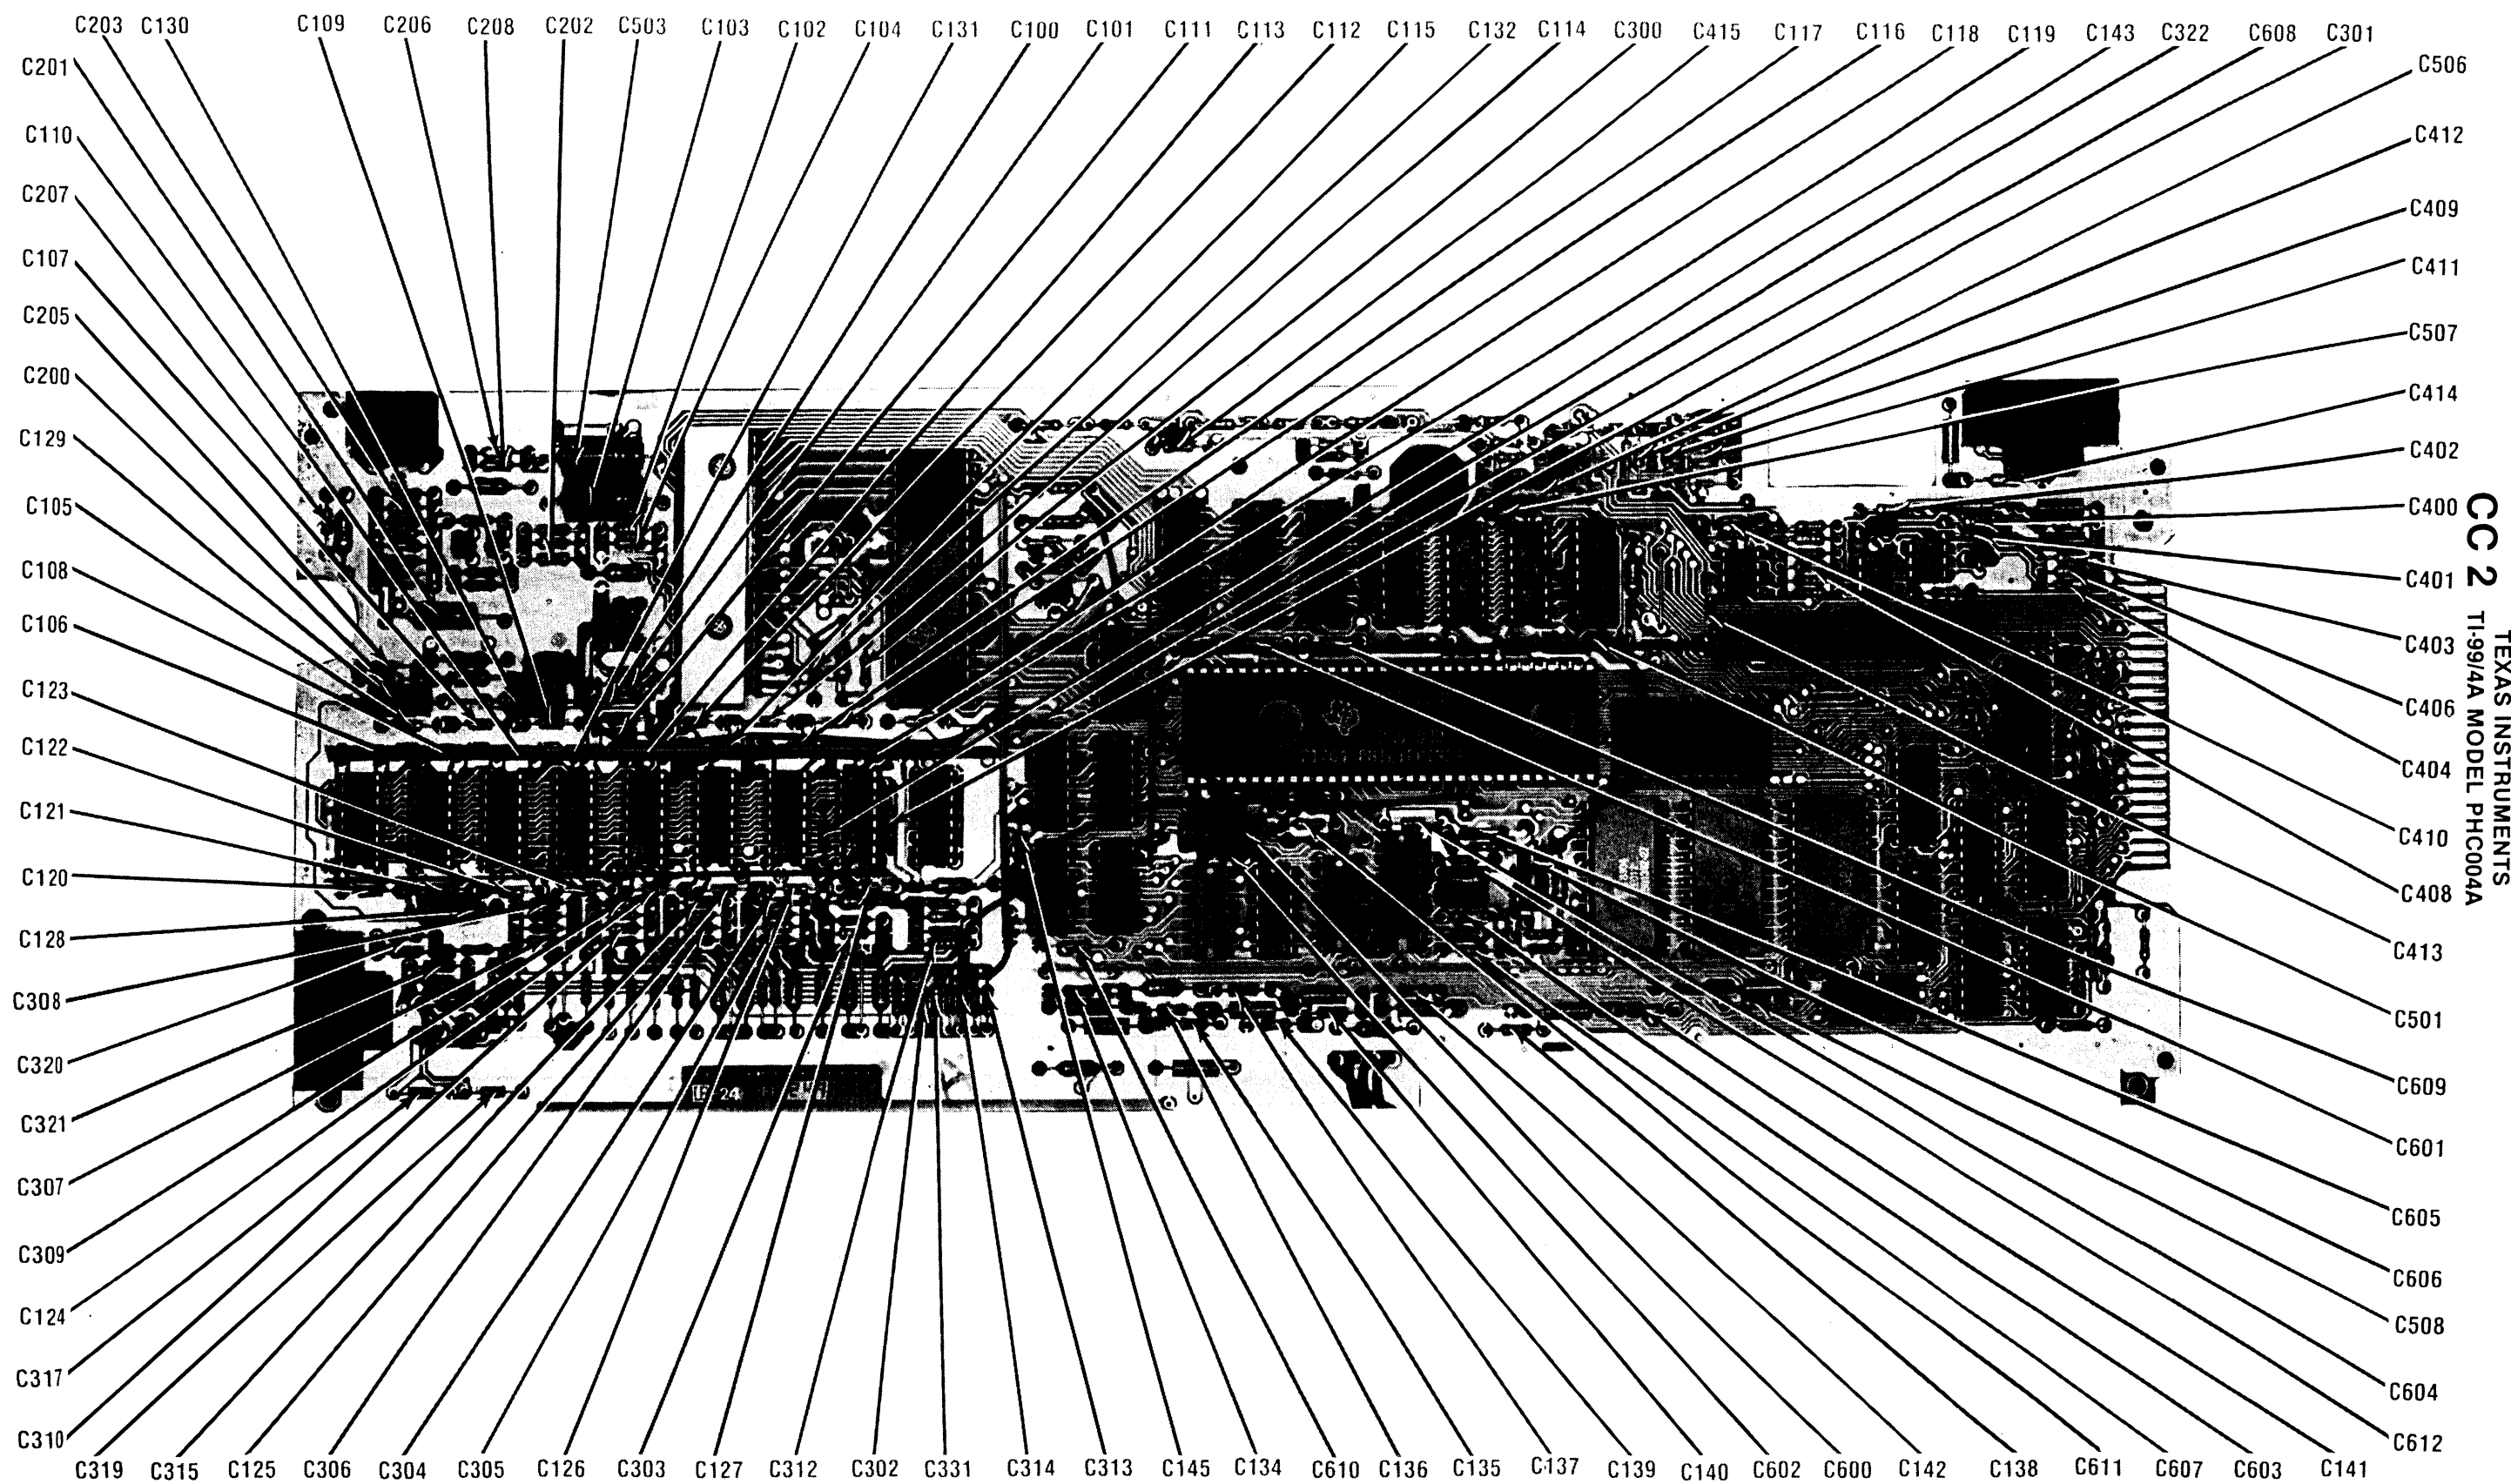

CC 2
TEXAS INSTRUMENTS
TI-99/4A MODEL PHC004A

MAIN BOARD

MAIN BOARD

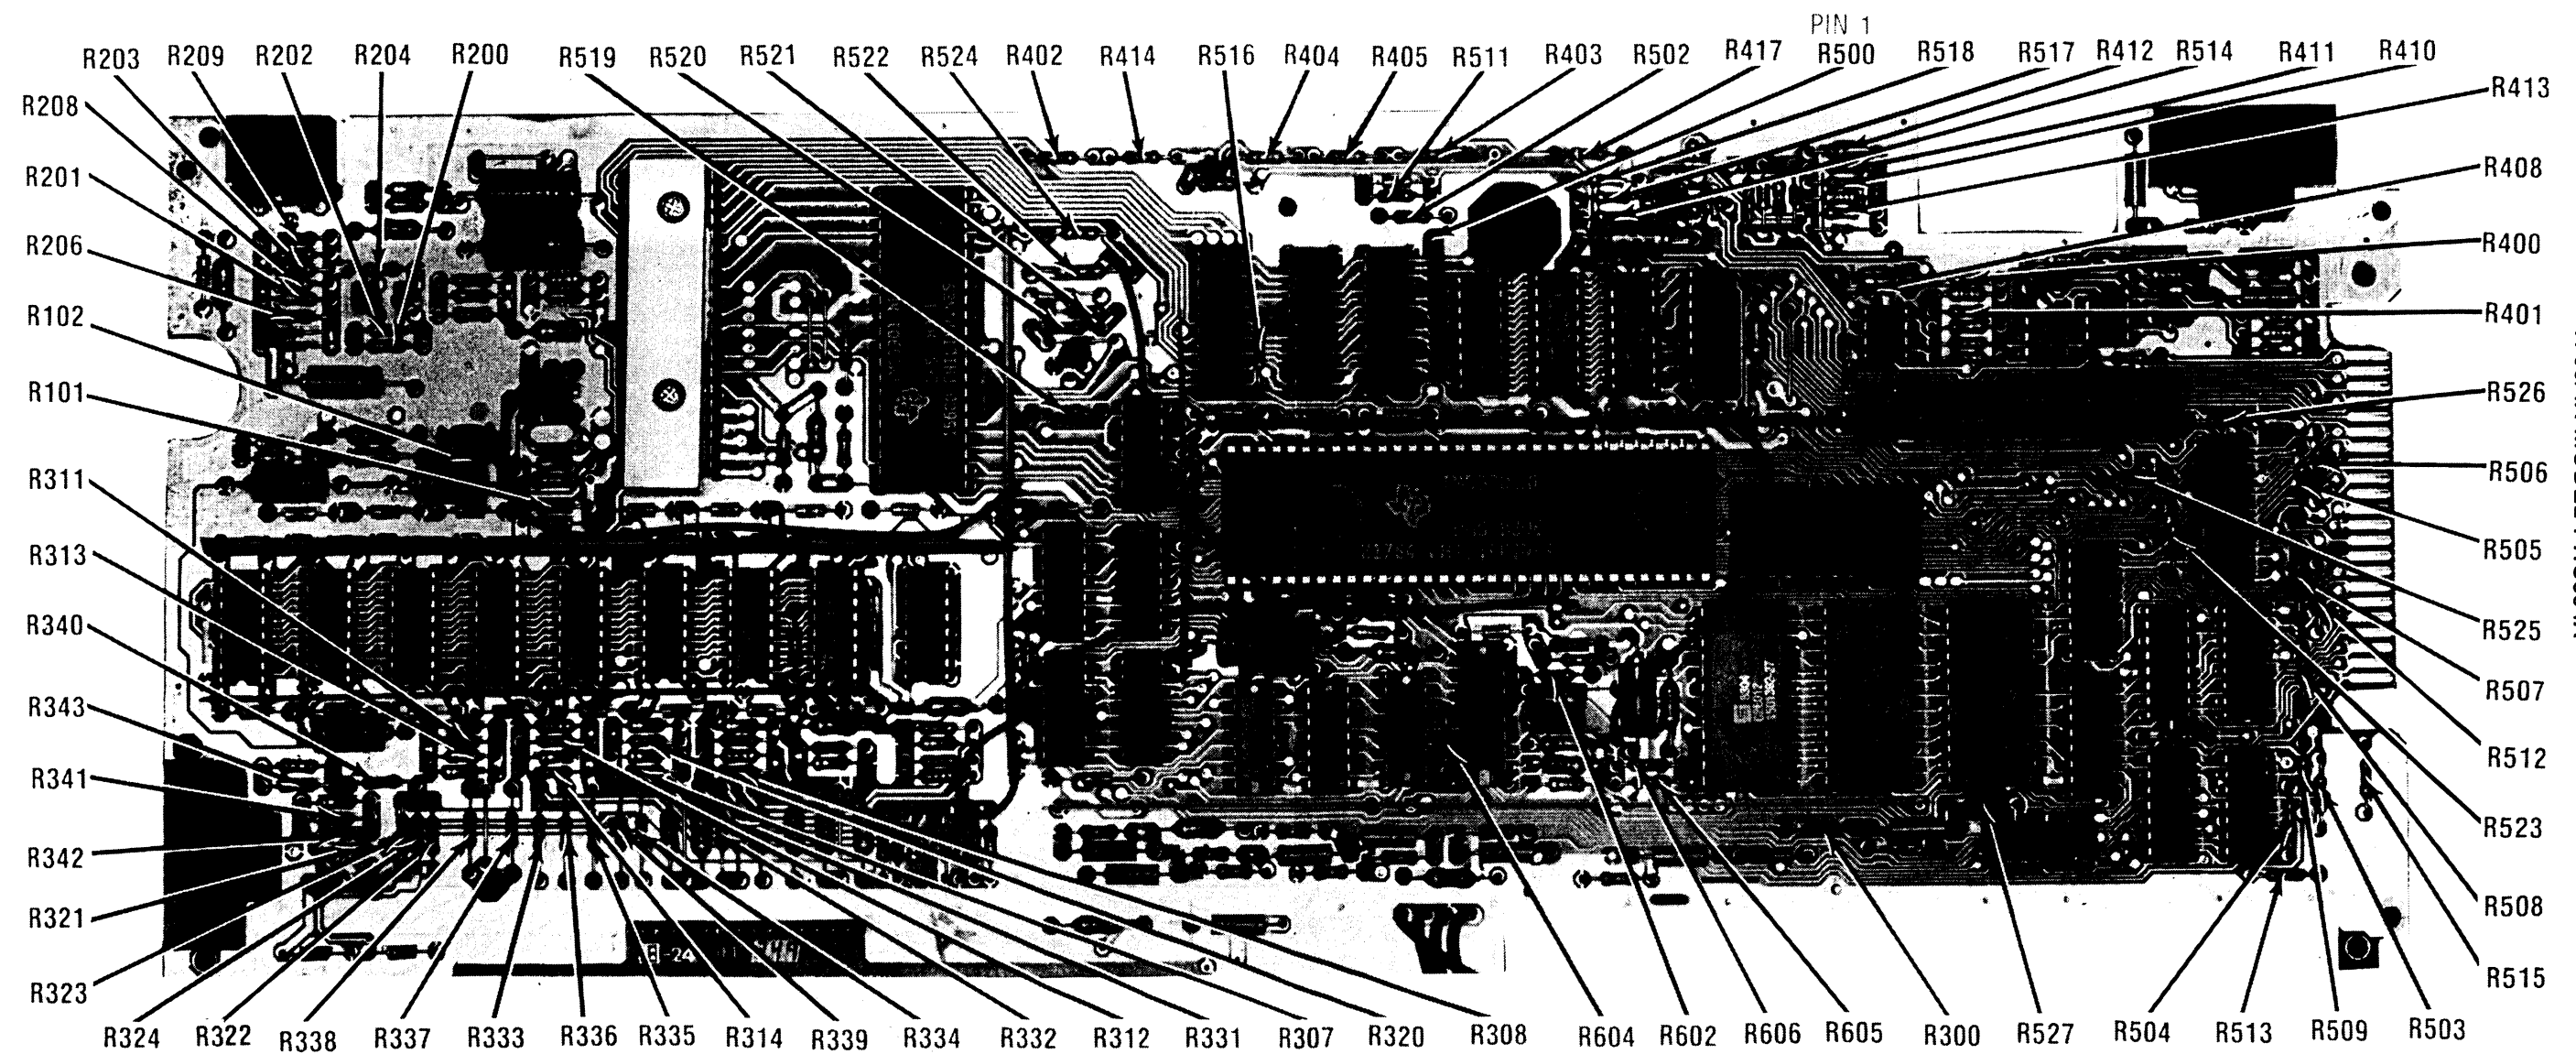

TEXAS INSTRUMENTS
TI-99/4A MODEL PHC004A

